

The keyless go control module (N69/5) has the following purposes:

- Control of left door keyless go lifting magnets (L12); right door keyless go lifting magnets (L12/2).
- Control of keyless go inductive antennas:
 - Rear bumper keyless go antenna (A2/31)
 - Left trunk keyless go antenna (A2/35)
 - Right trunk keyless go antenna (A2/36)
 - Left door keyless go antenna (A2/38)
 - Right door keyless go antenna (A2/40)
 - Center console keyless go antenna (A2/60)
- Locating keyless go transmitter card (A8/2) in or outside of vehicle via antenna system.
- Reading in keyless go start/stop button (S2/3).
- Reading in left door pull contact microswitch (S47s1), right door pull contact microswitch (S48s1).
- Reading in left door pressure contact (S47s2), right door pressure contact (S48s2).
- Reading in left door capacitive sensor (S47b1); right door capacitive sensor (S48b1).
- Reading in trunk lid keyless go button (S62/21).
- Reading in stop lamp switch (S9/1).