


MODEL 230.4 as of 15.1.04 with CODE (819) CD changer



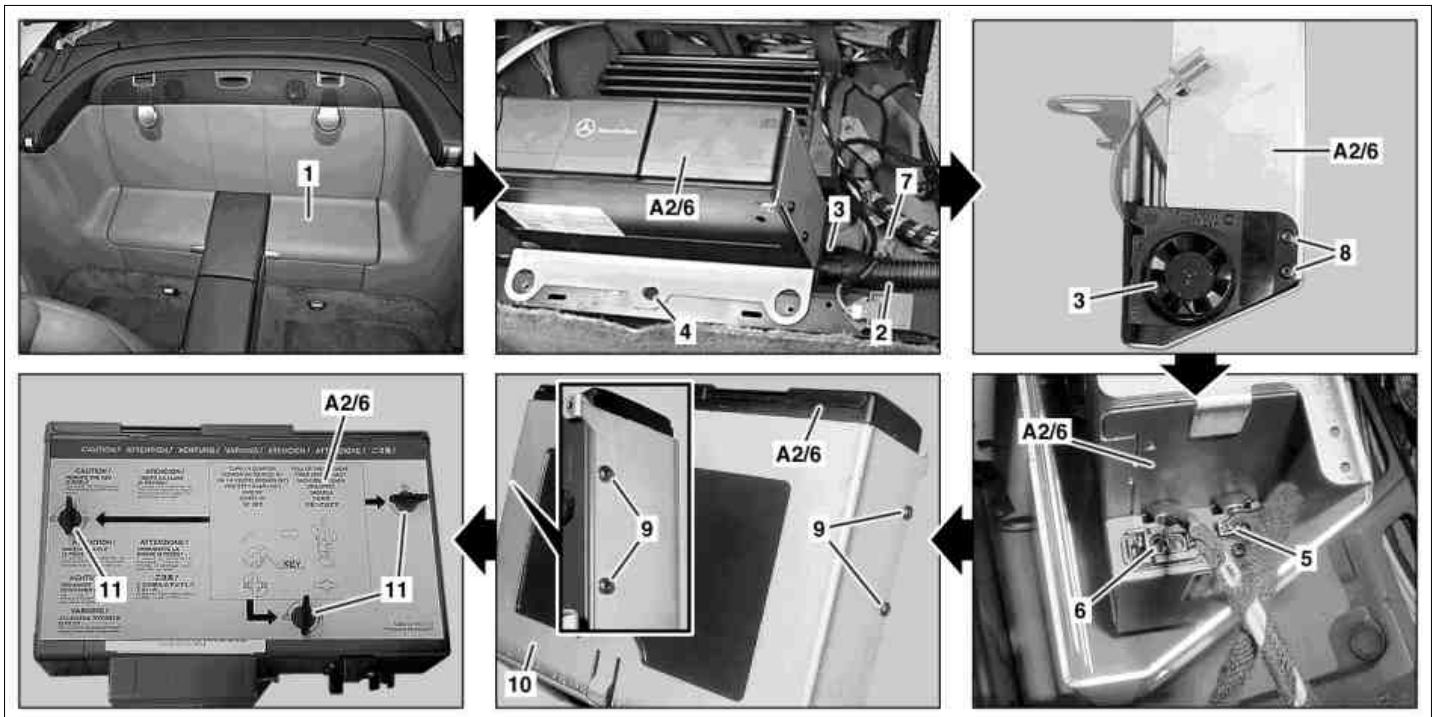


P82.64-2861-09

- |   |   |   |  |      |                        |
|---|---|---|--|------|------------------------|
| 1 | Luggage box                             | 4 | Clip                                       | 9    | Bolts                  |
| 2 | Intake hose<br>(only if retrofitted)    | 5 | Electrical connector                       | 10   | Bracket                |
| 3 | Additional fan<br>(only if retrofitted) | 6 | Fiber-optic cable connection               | 11   | Transport locks        |
|   |   | 7 | Electrical connector (only if retrofitted) | A2/6 | CD player with changer |
|   |   | 8 | Screws (only if retrofitted)               |      |                        |

## Modification notes

21.11.05	Disconnect ground line replaced by switch off ignition	Step 2	
----------	--	--------	--

 	Remove/install		
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove left luggage box (1) and place to one side with lines still connected		AR68.30-P-7440RA
2	Switch off the ignition and remove the transmitter key from the EIS control unit	<b>i</b> On vehicles with code (889) Keyless Go, press the Keyless Go start/stop button repeatedly until the ignition is switched off. Remove the Keyless Go transmitter card or transmitter key from the vehicle and store beyond the reach of the transmitter (min. 2 m).	
3.1	Disconnect intake hose (2) from additional fan (3)	Only if retrofitted.	
4	Remove clip (4) and pull CD player with changer (A2/6) up and out	<b>i</b> Remove CD player with changer (A2/6) until electrical connectors (5, 7) and fiber optic cable coupling (6) are accessible.	
5.1	Disconnect electrical connector (7) for additional fan (3) from CD player with changer (A2/6)	Only if retrofitted.	
6.1	Remove screws (8) and remove additional fan (3) from CD player with changer (A2/6)	Only if retrofitted.	
7	Disconnect electrical connector (5) from CD player with changer (A2/6)		

8	Disconnect fiber optic cable coupling (6) from CD player with changer (A2/6)	<p>⚠ To avoid damaging them, do not kink fiber optic cables, route over sharp edges or bend in radii smaller than 25 mm.</p> <p>ℹ Cover fiber optic cable coupling (6) and implement connection on CD player with changer (A2/6). Refer to: ↓ Cover fiber optic cable</p>	AR82.95-P-0005-01A
9.1	Remove screws (9) and remove CD player with changer (A2/6) from bracket (10)	<p>Only when replacing CD player with changer (A2/6).</p> <p>ℹ <b>Installation:</b> When replacing CD player with changer (A2/6), transport locks (11) must be removed as per instructions on CD player with changer (A2/6).</p>	
10	Install in the reverse order		