


MODEL 230.4 except CODE (P99) "AMG Black Series" special model

Shown on vehicle up to end no. 112116

- 1 Electrical connector
 2 Electrical connector
 3 Nuts
 4 Electrical connector

A7/5 RVC [UVS] hydraulic unit

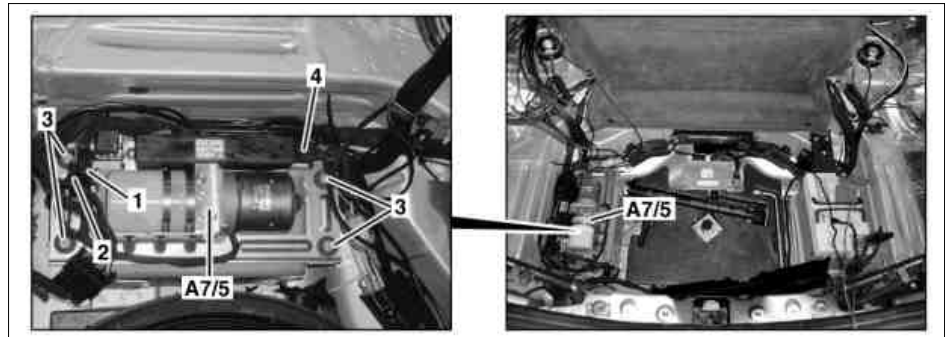


P77.37-2048-04

⚠ ⚠	Remove/install		
⚠ Danger!	Risk of injury to skin or eyes caused by hydraulic fluid spraying out under high pressure. Risk of poisoning caused by swallowing hydraulic fluid	Depressurize the hydraulic system completely before starting any work on the system. Wear protective clothing and safety glasses.	AS00.00-Z-0013-01A
⚠ Danger!	Risk of injury when performing check and repair work in area of rollover bar	Extend roll bar before working in the roll bar area. Keep body parts away from the moving area of the roll bar mechanical system.	AS91.00-Z-0003-01R
ⓘ	Notes on Vario roof assembly work		AH77.30-P-0002-01R
1	Completely open Vario roof with Vario roof switch and put up roll bar with roll bar switch.		
2	Switch off the ignition and remove the transmitter key from the EIS control unit	ⓘ On vehicles with code (889) Keyless-Go, press KEYLESS-GO start/stop button repeatedly until ignition is switched off. Remove KEYLESS-GO chip card or transmitter key from vehicle and store beyond reach of transmitter (min. 2 m).	
3	Lower roll bar mechanically	ⓘ Installation: Raise roll bar using roll bar switch.	AR91.50-P-8400R
4	Open trunk lid		
5	Move Vario roof to load assist position by hand and secure	ⓘ	AR77.50-P-3000-02R *230589066300
6	Open trunk partition		
7	Remove spare tire cover		
8	Remove soundproofing from RVC [UVS] hydraulic unit (A7/5)		
9	Disconnect electrical connectors (1, 2, 4) from RVC [UVS] hydraulic unit (A7/5)		
10	Unscrew nuts (3)		
11	Remove RVC [UVS] hydraulic unit (A7/5) and lay down in suitable vessel		
12	Disconnect all hydraulic lines from RVC [UVS] hydraulic unit (A7/5)	Nm Nm ⓘ	AR77.37-P-1000-04R *BA77.37-P-1001-01A *BA77.37-P-1002-01A *129589009100 AH77.37-P-0001-01R
ⓘ	Notes on separating hydraulic lines from Vario roof hydraulic unit		
13	Remove RVC [UVS] hydraulic unit (A7/5) from trunk		
14	Install in the reverse order		
15	Check oil level of RVC [UVS] hydraulic unit (A7/5), correct	Vehicles up to end no.112116 Vehicles as of end no.112117	AR77.37-P-3501R AR77.37-P-3501RA


Nm Soft top hydraulic components

Number	Designation	Model 230 up to vehicle ident. no. 112116	Model 230 as of vehicle ident. no. 112117
BA77.37-P-1001-01A	Emergency operation valve at hydraulic unit	Nm 1.5	1.5
	See picture	-	-
BA77.37-P-1002-01A	Bolt, connection plate to hydraulic unit	Nm 2.5	2.5

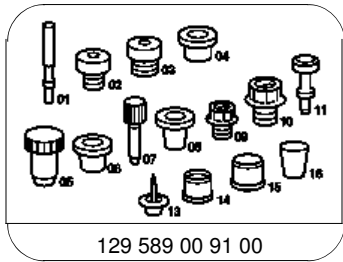

129 589 00 91 00

Set of stop plugs

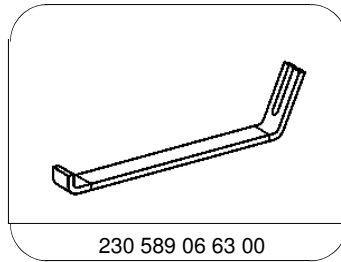

230 589 06 63 00

Support