



**Document number:** pe77\_39-p-2101-97/c  
**Document title:** Wiring diagram for Vario roof control module

<b>Code:</b>	<b>Designation:</b>	<b>Position:</b>
N52	RSC [UVS] control unit	52A
N52	RSC [UVS] control unit	60A
N52	RSC [UVS] control unit	68A
N70	Overhead control panel control unit	74A
N72	Lower control panel control unit	66L
N72e3	Vario roof indicator lamp	64L
N72s16	Vario roof switch	67L
N72s17	Roll bar switch	68L
S114	Load assist switch	23L
S117	Load ass ist up/down limit switch	20L
S117x1	Load ass ist up/down end switch connector	19H
S118/2	Right tubular frame "locked" limit switch	24L
S119	Tubular frame "open" limit switch	69L
S127/1	Right side flap "closed/open" limit switch	26L
S69/1	Vario roof "closed" limit switch (right pin)	75L
S69/10	Trunk partition "closed" limit switch	78L
S69/11	Vario roof "up/down" limit switch	18L
S69/11x1	Vario-roof "open/lowered" limit switch connector	18H
S69/3	Vario roof "locked" limit switch (left rotary tumbler)	70L
S83/10	Roll bar "down/up" limit switch	21L
U12	Valid for left-hand drive vehicles	55F
U12	Valid for left-hand drive vehicles	59F
U127	Valid for engine 272, engine 273 KE	2G
U127	Valid for engine 272, engine 273 KE	42G
U13	Valid for right-hand drive vehicles	55F
U13	Valid for right-hand drive vehicles	59F
U152	Valid for engine 156	38E
U152	Valid for engine 156	2F
U184	Valid for series	42F
U428	Valid for SL 65 AMG and SL 600	21G
U428	Valid for SL 65 AMG and SL 600	2E
W15	Power ground (electronics)	1E
W15	Power ground (electronics)	19E
W24	Ground (roll bar control unit)	51H
W6	Ground (left wheelhouse in luggage compartment)	71E
W6	Ground (left wheelhouse in luggage compartment)	24F
W6	Ground (left tail lamp in trunk)	37C
W6/1	Ground (left tail lamp in trunk)	
W6/1	Ground (left tail lamp in trunk)	

<b>Code:</b>	<b>Designation:</b>	<b>Position:</b>
W6/1	Ground (left tail lamp in trunk)	69E
W7	Ground (right wheelhouse in luggage compartment)	78H
X111	Tubular frame "open" intermediate connector	68H
X113	Front Vario roof "locked" intermediate connector	70H
X30/15	Driver CAN B voltage distributor connector	57L
X30/15	Driver CAN B voltage distributor connector	61L
X30/16	Front passenger CAN B voltage distributor connector	57L
X30/16	Front passenger CAN B voltage distributor connector	61L
X30/17	Rear voltage distributor (CAN B) connector	53L
X35/71	RFEL [FFZ] separation point	73G
X8/4	Trunk lid separation point	22H
X8/4	Trunk lid separation point	28H
X8/4	Trunk lid separation point	9E
X8/4	Trunk lid separation point	26E
V55/1	RVC [UYS] valve block	51L
V55/1y1	Main valve	47L
V55/1y2	Roll bar up solenoid valve	48L
V55/1y3	Close Vario roof solenoid valve	49L
V55/1y4	Open Vario roof solenoid valve	49L
V55/1y5	Tubular frame and Vario roof latches solenoid valve	50L
V55/1y6	Load assist solenoid valve	50L
V57/1	RB [URB] deployment solenoid	1L
Z6/92	Trunk lid ground connector sleeve	25G