


MODEL 230.4 except CODE (P99) "AMG Black Series" special model

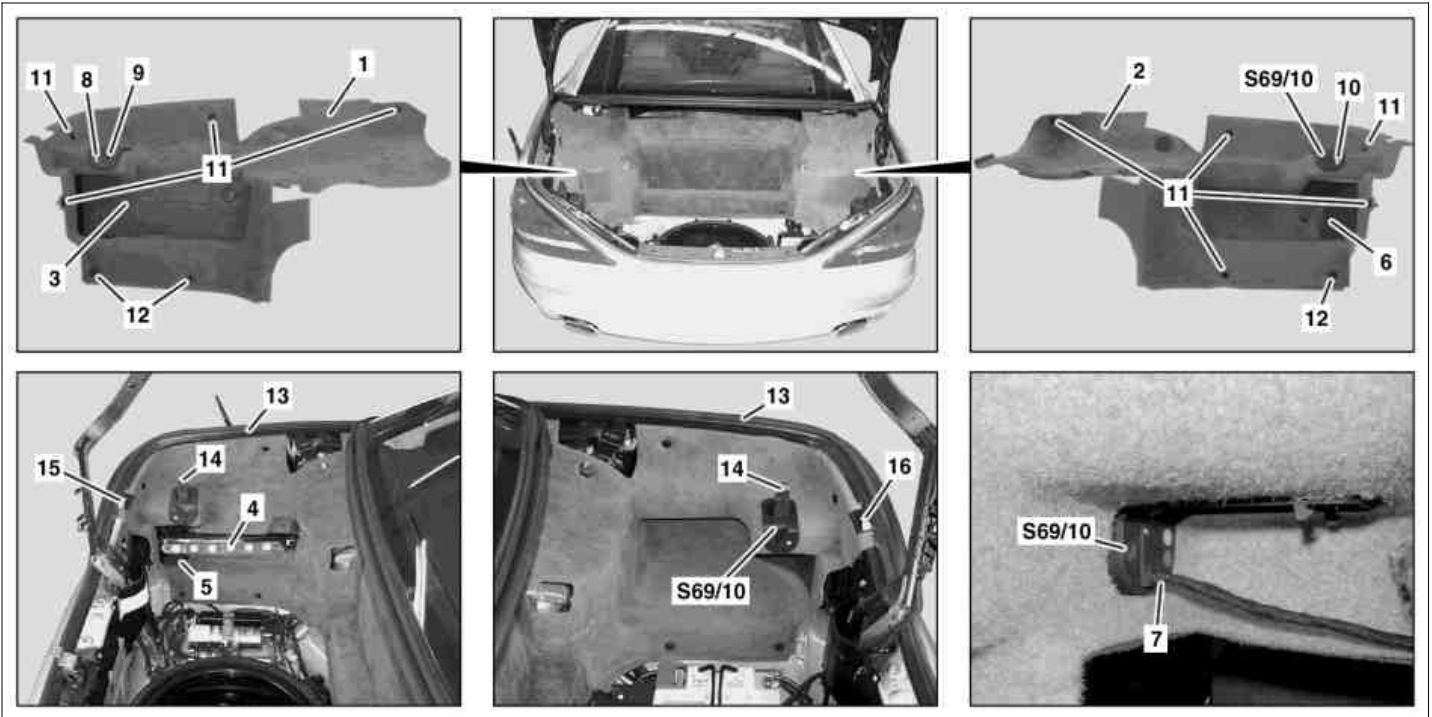

P68.30-3260-09

- 1 Left trunk paneling
- 2 Right trunk paneling
- 3 Hazard warning triangle cover
- 4 Hazard warning triangle
- 5 Left access opening cover
- 6 Right access opening cover
- 7 Electrical connector
- 8 Screw
- 9 Trunk partition bracket
- 10 Screw
- 11 Expansion clip
- 12 Screw clips
- 13 Trunk lid seal
- 14 Base
- 15 Left Y fixture
- 16 Right Y fixture
- S69/10 Trunk partition "closed" limit switch
- 17 Trunk partition mount (vehicles as of 1.3.06)



P68.30-3261-11

☒ ☒	Remove/install		
1	Completely close Vario roof		
⚠ Danger!	Risk of injury caused by moving parts that can pinch, crush or, in extreme cases, even sever extremities	No parts of the body or limbs should be within the operating range of the mechanism when moving components.	AS00.00-Z-0009-01A

2	Positioning trunk lid to assembly position		AR88.50-P-5000-01R
3	Remove trunk partition	i Vehicles up to 28.2.06: Remove/install trunk retractable partition	AR68.50-P-3000R
4	Unscrew concealed bolt (arrow) on left or right trunk partition mount (17) and remove trunk partition mount (17) toward rear.	On vehicles as of 1.3.06	
5	Remove trim from rear end center assembly		AR68.30-P-4785R
6	Remove hazard warning triangle cover (3) and remove hazard warning triangle (4).	When removing left trunk paneling (1).	
7	Unclip left access opening cover (5) or right access opening cover (6) and remove.		
8	Disconnect electrical connector (7) from trunk partition "closed" limit switch (S69/10)	When removing right trunk paneling (2). i Access to the electrical connector (7) is accomplished via the access opening below the right access opening cover (6).	
9.1	Unscrew bolt (8) and remove trunk partition bracket (9).	When removing left trunk paneling (1).	
9.2	Unscrew bolt (10) and remove trunk partition "closed" limit switch (S69/10)	When removing right trunk paneling (2).	
10	Remove left Y fasteners (15) or right Y fasteners (16).		
11	Remove expansion clips (11) and screw clips (12).		
12	Loosen left trunk paneling (1) or right trunk paneling (2) from trunk lid seal (13).	i Installation: Ensure that the trunk lid seal (13) is seated correctly.	
13	Pull left trunk paneling (1) or right trunk paneling (2) over support (14) and remove.		
14	Install in the reverse order		