


MODEL 230.4

- 1 Wiper system
 2 Securing nuts
 3 Bolts
 4 Bracket
 5 Adjusting nut

- M6/1 Wiper motor
 M6/1x1 Wiper motor connector

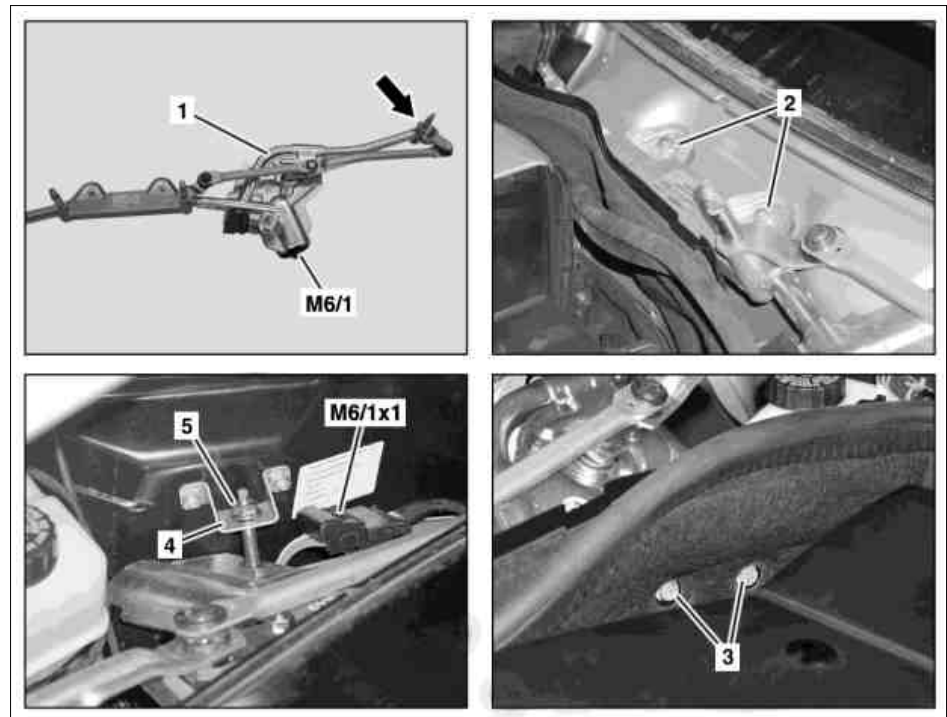

P82.30-2577-06

| | Remove/install | | |
|------------------|---|--|---------------------|
| ⚠ Danger! | Risk of injury in the form of trapping or crushing, or even severing of limbs, if caught in windshield wiper mechanism | Always remove ignition key when working on windshield wiper mechanism. | AS82.30-Z-0001-01A |
| 1 | Remove water collector | | AR83.25-P-1402R |
| 2 | Remove mounting nuts (2) and concealed mounting nut on wiper shaft (arrow) of wiper system (1) | Nm | *BA82.30-P-1006-01A |
| 3 | Remove bolts (3) from bracket (4) of wiper system (1) | i Do not loosen adjusting nut (5). Nm | *BA82.30-P-1007-01A |
| 4 | Lift wiper system (1) and disconnect wiper motor connector (M6/1x1) from wiper motor (M6/1) | | |
| 5 | Move wiper system (1) to vertical position and remove | | |
| 6 | Install in the reverse order | | |

Nm Windshield wiper

| Number | Designation | Model 230 | |
|--------------------|---|-----------|----|
| BA82.30-P-1006-01A | Nut/screw, wiper system to body | Nm | 19 |
| BA82.30-P-1007-01A | Nut/screw, wiper system to partition wall | Nm | 10 |