







MODEL 164 with CODE (551) Anti-theft alarm system (ATA [EDW])

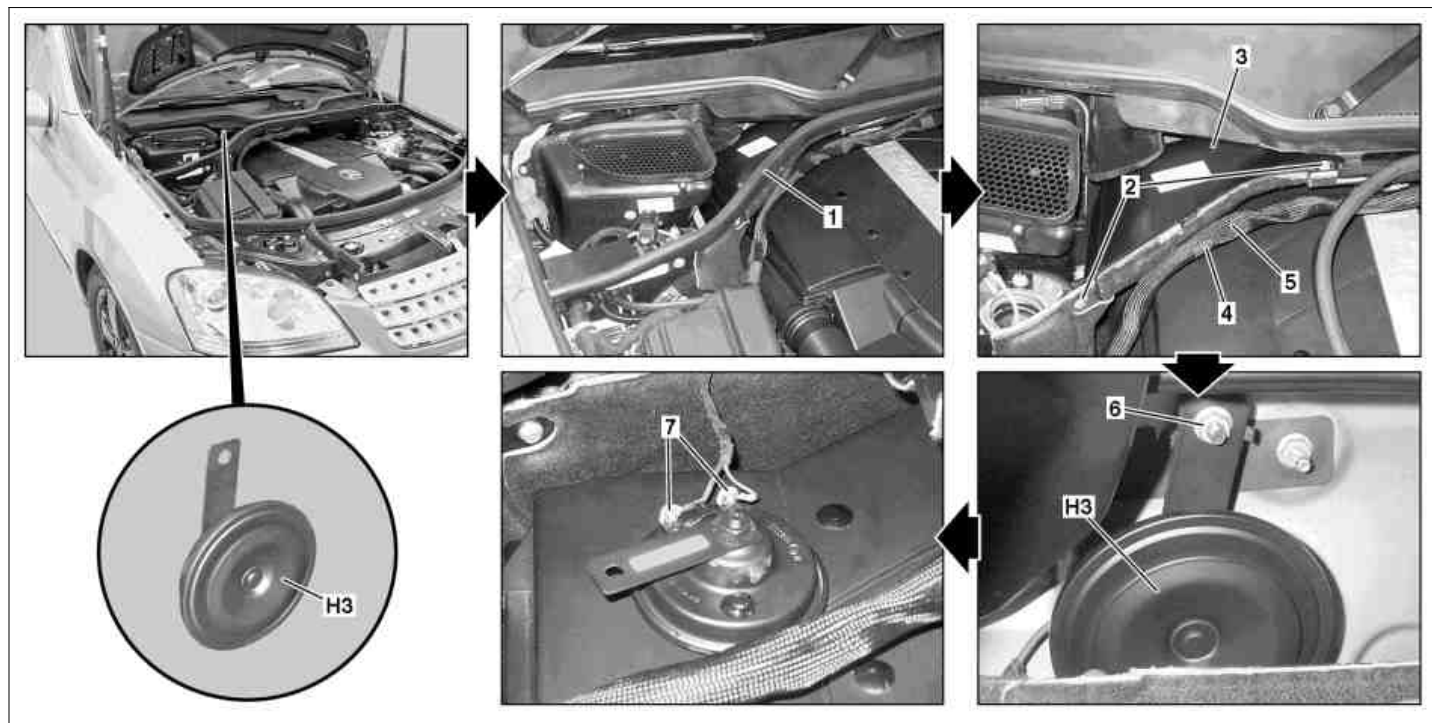

P80.50-2497-09

Shown on model 164.1 with engine 272

- | | |
|---|--|
| <p>1 Engine partition wall seal</p> <p>2 Bolts</p> <p>3 Cover</p> <p>4 Bracket</p> <p>5 Wiring harness</p> | <p>6 Nut</p> <p>7 Bolts</p>
<p>H3 Alarm signal horn</p> |
|---|--|

 	Remove/install		
1	Partially loosen engine partition wall seal (1)	 In right area.	
2.1	Remove wiring harness (5) from bracket (4)	 If present.	
3	Unscrew bolts (2) and remove cover (3).	 Installation: The cover (3) has an additional retaining lug in the rear area. It should reach into a corresponding lug in the bottom section of the dividing wall.	
4	Unscrew nut 86) and remove alarm signal horn (H3)		
5	Unscrew bolts (7) to disconnect alarm signal horn (H3) electrically.		
6	Remove alarm signal horn (H3)		
7	Install in the reverse order		