


## 10 to 18 Fuses

## F3 Cockpit fuse box

The cockpit fuse box is located in the cockpit on the passenger-side.

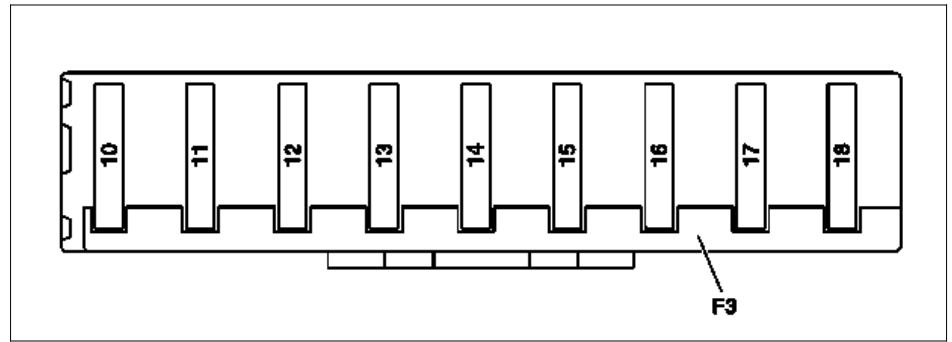

P54.15-2730-04

Fuse	Clamping device	Cable ID (cable fused)	Fused function	Rating in amperes (A)
f10	30	1.0 RD	<ul style="list-style-type: none"> <li>Booster blower electronic blower controller (N29/2)</li> </ul>	10
f11	30	0.5 RDWH	<ul style="list-style-type: none"> <li>Instrument cluster (A1)</li> </ul>	5
f12	30	1.5 RDBK	<ul style="list-style-type: none"> <li>AAC [KLA] control and operating unit (N22)</li> </ul>	15
f13	30	0.5 RDBU 0.5 RDBU	<ul style="list-style-type: none"> <li>Steering column module (N80)</li> <li>Upper control panel control unit (N72/1/)</li> </ul>	5
F14	30	0,75 RDWH 0,75 RDWH	<ul style="list-style-type: none"> <li>EIS [EZS] control unit (N73)</li> </ul> <p><b>Valid for code 819 CD changer (6CDs):</b></p> <ul style="list-style-type: none"> <li>CD changer (A2/6/)</li> </ul>	7.5
f15	30		<ul style="list-style-type: none"> <li>Electronic compass (B26)</li> </ul>	5
F16	-	-	-	-
F17	-	-	-	-
F18	-	-	-	-