


1 Jump-starting point (starter-alternator, battery)

4 up to 8 Fuses

F32 Front prefuse

The prefuse box is located next to the air inlet of the air conditioning.

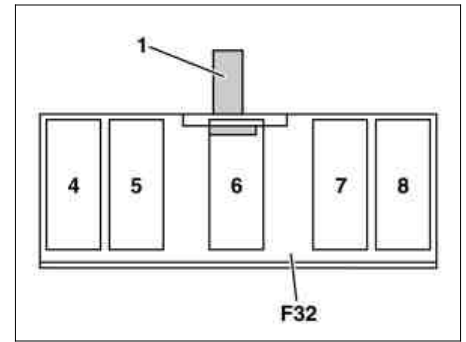

P54.15-2727-01

Fuse	Clamping device	Cable ID (cable fused)	Fused function	Rating in amperes (A)
	-	-	-	-
	-	-	-	-
f6	30z	RD 4.0	<ul style="list-style-type: none"> ● ESP control unit (N47-5) 	40
f7	30z	12,0 RD	<ul style="list-style-type: none"> ● AAC with integrated control additional fan motor (M4/7) 	100
f8	30z	10,0 RD	<ul style="list-style-type: none"> ● Engine compartment fuse and relay box (F58) 	150