


**Relay assignment before production period 31.05.2006**

20 to 72 Fuses  
 K to P Relays  
 R to T Relays

F4 Load compartment fuse and relay box

The load compartment fuse and relay box is installed in the load compartment on the right of the wheelhouse.

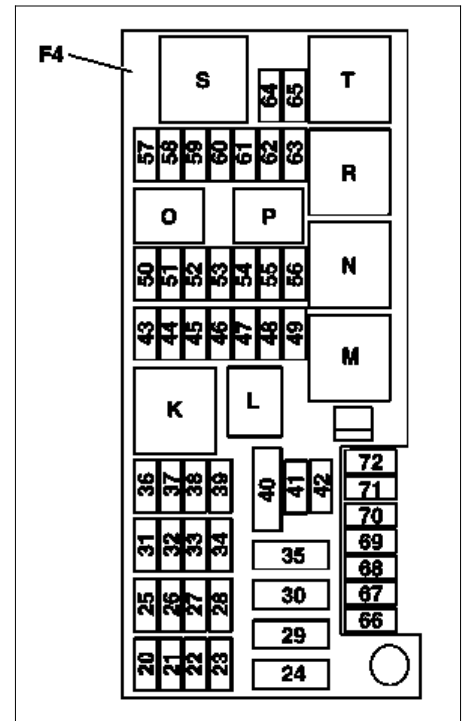


P54.15-2729-03

**Relay assignment as of production period 01.06.2006**

20 to 72 Fuses  
 K to P Relays  
 R to V Relays

F4 Load compartment fuse and relay box

The load compartment fuse and relay box is installed in the load compartment on the right of the wheelhouse.

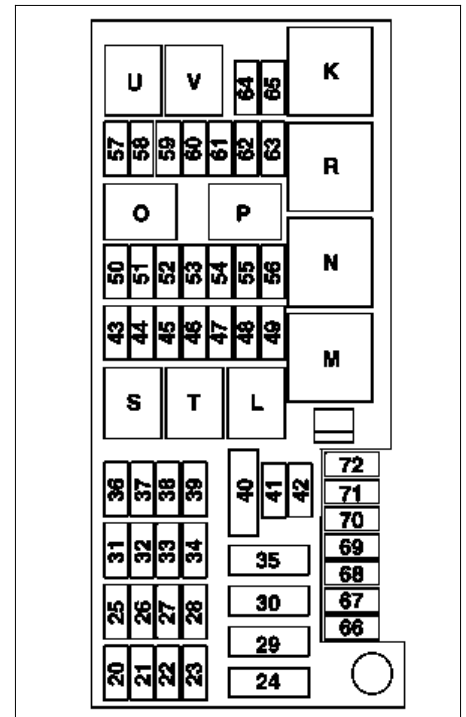

P54.15-2966-03

Relays	Designation
K	<b>Before production period 31.05.2006</b> <ul style="list-style-type: none"> <li>Terminal 15R power outlet relay, with power-down</li> </ul> <b>As of production period 01.06.2006</b> <ul style="list-style-type: none"> <li>Circuit 15R seat adjustment</li> </ul>
L	<b>Valid for code 550 Trailer hitch:</b> Terminal 30X
M	Heated rear window relay

N	Circuit 15 relay / terminal 87FW
O	Fuel pump relay
P	Rear wiper relay
R	Circuit R relay115R
S	-
T	<b>As of production period 01.06.2006</b> <ul style="list-style-type: none"> <li>● Circuit 30, socket for 2nd seat row and load compartment</li> </ul>
U	<b>As of production period 01.06.2006</b> <ul style="list-style-type: none"> <li>● Circuit 30, trailer</li> </ul>
V	<b>As of production period 01.06.2006</b> -