
AR20.10-P-2460QK Remove/install coolant thermostat ENGINE 271.940 in MODEL 203.042 /242 /742, 209.342 /442 ENGINE 271.941 in MODEL 211.042 /242 ENGINE 271.946 in MODEL 203.046 /246 /746 ENGINE 271.948 in MODEL 203.040 /740 ENGINE 271.921 in MODEL 203.730 ENGINE 271.955 in MODEL 209.341 /441 ENGINE 271.956 in MODEL 211.041 /241 ENGINE 271.942 in MODEL 203 ENGINE 271.957 in MODEL 203.741

Shown on ENGINE 271 in MODEL 209

- Coolant thermostat housing 1
- 2 Coolant thermostat
- З Bolts

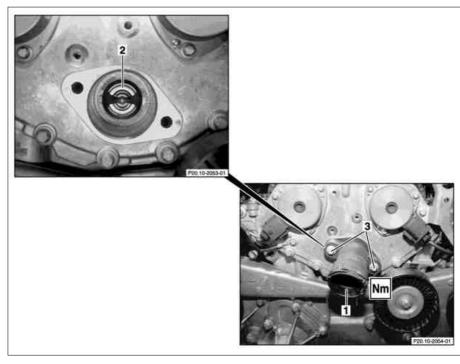

P20.10-2055-06

XX	Remove/install		
⚠ Danger!	Risk of injury to skin and eyes caused by scalding from contact with hot coolant spray. Risk of poisoning from swallowing coolant.	Do not open cooling system unless coolant temperature is below 90 °C. Open cap slowly and release the pressure. Do not pour coolant into beverage containers. Wear protective gloves, protective clothing and safety glasses.	AS20.00-Z-0001-01A
1	Drain coolant from radiator	Model 203, 209	AR20.00-P-1142PR
_		Model 211	AR20.00-P-1142T
	Notes on coolant		AH20.00-N-2080-01A
i	Notes on coolant level		AH20.00-P-1142-01P
2	Open engine hood	Model 203	AR88.40-P-1000P
		Model 209	AR88.40-P-1000Q
		Model 211	AR88.40-P-1000T
3	Detach coolant hose (1) on the housing of the coolant thermostat (2)	i Installation: Inspect sealing ring and coolant hose for damages and replace if necessary. Thoroughly clean connection points, do not grease. Ensure the locking springs are exactly located.	
4	Remove bolts (3)	M Screw of coolant thermostat housing to cylinder head	*BA20.10-P-1003-01I
5	Remove housing (1) for coolant thermostat (2)	i Replace O-ring.	
6	Pull out coolant thermostat (2)		
7	Install in the reverse order		
8	Inspect cooling system for leaks		AR20.00-P-1010P
⚠ Danger!	Risk of accident caused by vehicle starting off by itself when engine is running. Risk of injury caused by contusions and burns during starting procedure or when working near the running engine	Secure vehicle to prevent it from moving by itself. Wear closed and snug-fitting work clothes. Do not grasp hot or rotating parts.	AS00.00-Z-0005-01A
9	Check for leaks with engine running		

© Daimler AG, 1/9/14, G/07/10 / ar20.10-p-2460qk / Remove/install coolant thermostat Page 1 of 2 ENGINE 271.940 in MODEL 203.042 /242 /742, 209.342 /442 ENGINE 271.941 in MODEL 211.042 /242 ENGINE 271.946 in MODEL 203.046 /246 /746 ENGINE 271.948 in MODEL 203.040 /740

Nm Coolant pump, coolant thermostat

Number	Designation	Engine 271
BA20.10-P-1003-01I	Bolt, coolant thermostat housing at cylinder head Nm	9