


Assignment of rear fuse and relay box

50-77 Fuses
K40/5 Rear fuse and relay module

Q-U Relays

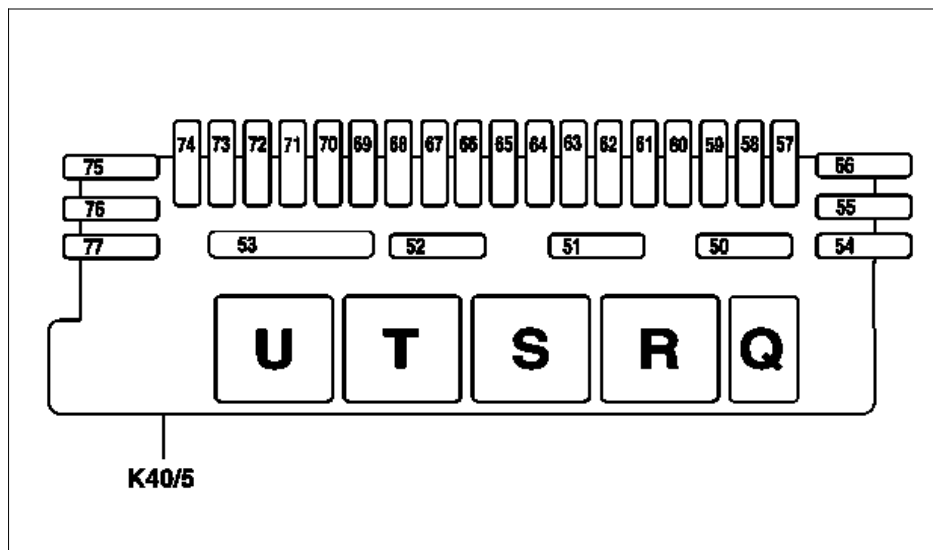

P54.15-2033-05

Fuse	Terminal	Cable ID (fused line)	Fused function	Rating in amperes (A)
f50	30	-	● Reserve relay (K40/5kQ)	-
f51	30	-	Valid for AMG: ● Charge air cooler circulation pump relay (K40/5kR)	40
f52	30	-	● Fuel pump relay (K40/5kT)	30
f53	30	-	● Heated rear window relay (K40/5kU)	30
f54	30	-	Spare	-
F55	30	0,5 RDWH	Valid for code (228) stationary heater: ● STH radio remote control receiver (A6/1)	5
f56	30	2,5 RDYE	Valid for code (228) stationary heater: ● Stationary heater control unit (A6n1)	20
f57	30	1,5 RDBU	Fused via circuit 30 connector sleeve (Z4/7): ● Rear shelf antenna amplifier (A2/67) ● Left antenna amplifier module (A2/64)	5
f58	30	GYBK 0,75	Valid for code (889) Keyless Go: Fused via circuit 30 connector sleeve (Z7/19): ● Keyless Go control unit (N69/5) ● Left door Keyless Go antenna (A2/38) ● Right door Keyless Go antenna (A2/40) ● Left door Keyless Go lift solenoid (L12) ● Right door Keyless Go lift solenoid (L12/2)	7.5
f59	30	-	Spare	-
f60	30	RDVT 1,0	Valid for engine 275: ● Charge air cooler circulation pump relay (K60)	7.5
f61	30	RDVT 4,0	● Circuit 15R/30 cutoff relay (K75)	30
f62	30	RDPK 2,5	● RVC control unit (N52)	5
f63	30	RDBK 2,5	● RVC control unit (N52)	25
f64	30	RDBK 0,5	Valid for code (813) voice control system (VCS): ● Voice control system control unit (A35/11)	5
f65	30	-	Spare	-
f66	30	RDYE 2,5	Valid for code (810) sound system: ● Sound amplifier (A2/13)	25
f67	30	BKRD 0,5	Valid for code (220a) Parktronic system (PTS): ● PTS control unit (N62)	5
f68	30	BK 2,5	● Roll bar (RB) deployment solenoid (Y57/1)	25
f69	30	RDGN 2,5RDYE 0,5	● RVC control unit (N52)	25
f70	30	RDYE 0,5	Valid for code (475) tire pressure monitor ● TPM [RDK] control unit (N88)	5
f71	30	RDWH 1,5	● Pneumatic control unit (combined) (A37)	20

f72	30	RDGN 2,5	Valid for code (424) Sequentronic automated manual transmission (SEQ): <ul style="list-style-type: none"> Automated manual transmission control unit (N15/6) 	10
f73	30	RDWH 4,0	<ul style="list-style-type: none"> Engine (A7/5m1) 	40
f74	30	RDBU 0,5	<ul style="list-style-type: none"> RVC control unit (N52) 	5
	30	RDBU 0,5	<ul style="list-style-type: none"> ATA [EDW] inclination sensor (B33) 	5
f75	30	-	Spare	-
f76	30	RDBK 1,0	Valid for code (855) TELE AID: Fused via circuit 30 connector sleeve (Z4/3): <ul style="list-style-type: none"> D2B telephone and TELE AID transmitter/receiver (A35/17) 	7.5
		RDGY 0,75 RDBY 0,75	Valid for code (853) standard MB telephone: Fused via circuit 30 connector sleeve (Z4/3): <ul style="list-style-type: none"> D2B telephone transmitter/receiver (A35/13) Valid for code (852) complete portable telephone preinstallation at dome or for code (854) MB telephone: <ul style="list-style-type: none"> Telephone interface (A34/4) E-net compensator (A28/3) 	
f77	30	RDYE 1,5	Valid for code (860) TV tuner: <ul style="list-style-type: none"> TV tuner (A2/42) 	20
		RDYE 2,5	Valid for radio (standard): <ul style="list-style-type: none"> Radio (A2) Valid for code (352a) COMAND operating and display system: <ul style="list-style-type: none"> COMAND operating, display and control unit (A40/3) 	