

P68.10-2572-09


- 1 Instrument panel bottom section
- 2 Bolts
- 3 Paneling

- 4 Bolt
- 5 Bolts
- 6 Cover
- 7 Bolt


- A8/1 Transmitter key
- N73 EIS [EZS] control unit

- 1 Instrument panel bottom section
- 8 Bolt
- 9 Rosette



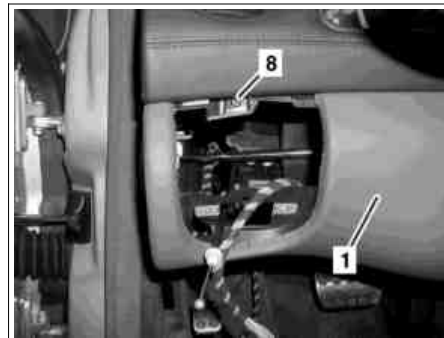



N73 EIS [EZS] control unit

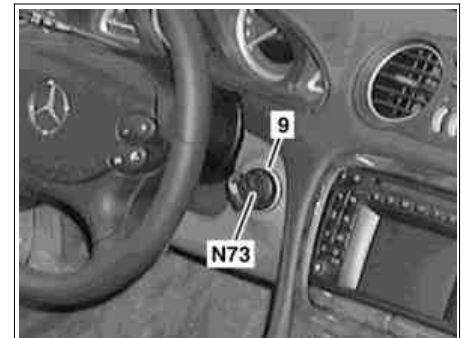


P68.10-2571-01

 

P68.10-2591-01

 
 	Remove/install		
1	Adjust driver seat to the rear		
2	Loosen instrument cluster until bolts (2) are accessible.		Do not disconnect electrical connector from instrument cluster.
2			AR54.30-P-6015R
3	Remove bolts (2)		
4	Unclip paneling (3) with mounting wedge		*110589035900
5	Unscrew bolt (4)		
6	Remove transmitter key (A8/1) from EIS control unit (N73)		
7	Unscrew rosette (9) from EIS control unit (N73) with claw-type wrench		*210589000700
8	Remove cover below instrument panel on left		AR68.10-P-1500R
9	Remove bolts (5)		
10	Unclip cover (6) with mounting wedge		*110589035900
11	Unscrew bolt (7)		
12	Remove rotary light switch		AR54.25-P-3250R

13	Unscrew bolt (8)		
14	Remove instrument panel bottom section (1) downward	i Pull EIS control unit (N73) out of instrument panel bottom section (1) toward rear Do not disconnect electrical connectors from EIS control unit (N73)	
15	Install in the reverse order		

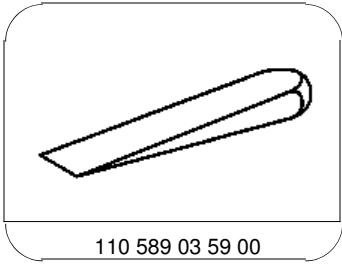

110 589 03 59 00

Mounting wedge

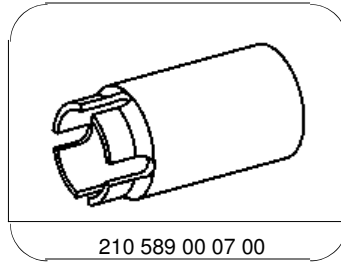

210 589 00 07 00

Claw-type wrench for rosette on ignition/starter switch