


MODEL 230.4 with CODE (881) Remote trunk closing (RTC [HDFS])

- 1 Trunk lid
 2 Electrical line
 3 Bolt
 4 Remote trunk closing hydraulic cylinder

B24/16 Trunk lid position sensor

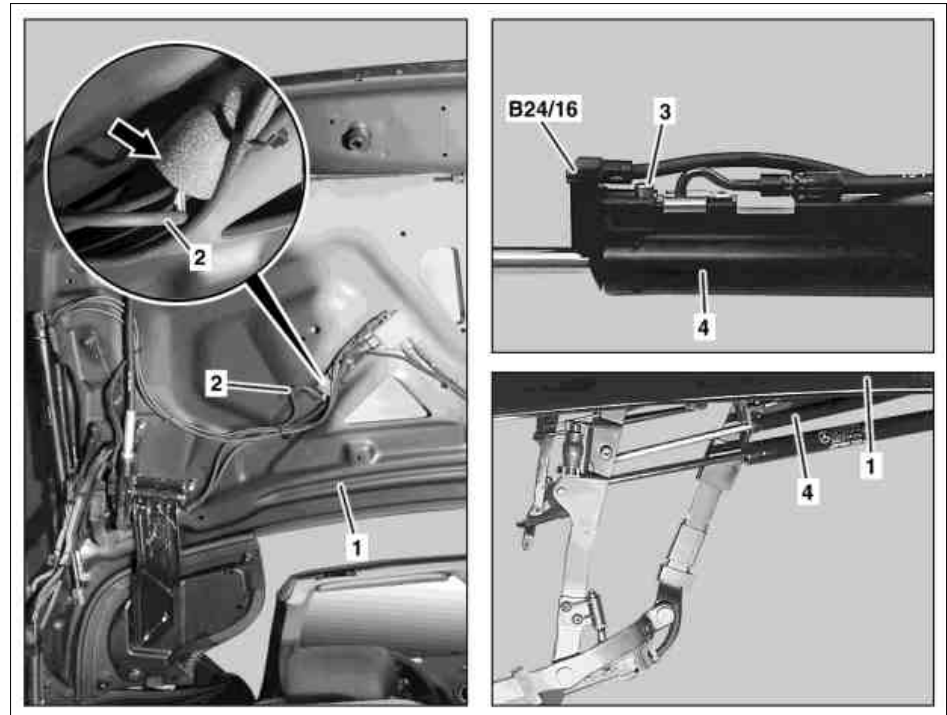

P88.50-2726-06

| | Remove/install | | |
|-----|--|---|---|
| 1 | Remove paneling from trunk lid (1) | | AR68.30-P-8150R |
| 2 | Place suitable protector on Vario roof front section laid down in trunk. | The protector prevents Vario roof front section from being soiled or damaged by falling objects. | |
| 3 | Expose concealed electrical connector (arrow) and disconnected | | |
| 4 | Remove electrical line (2) from trunk lid (1) | | |
| 5 | Unscrew bolt (3). | | |
| 6 | Remove trunk lid position sensor (B24/16) from remote trunk closing hydraulic cylinder (4) | | |
| 7 | Install in the reverse order | | |
| 8.1 | Perform normalization of remote trunk closing | Only when replacing trunk lid position sensor (B24/16). If the remote trunk closing has already been normalized, first denormalize with STAR DIAGNOSIS before normalizing again. | |
| | Connect STAR DIAGNOSIS and read out fault memory | STAR DIAGNOSIS diagnosis system | AD00.00-P-2000-04A *WH58.30-Z-1048-13A |

Commercially available tools

| Number | Designation | |
|--------------------|--|--------------|
| WH58.30-Z-1048-13A | STAR DIAGNOSIS diagnosis system, Compact Passenger Car | 6511 1801 00 |