


21 to 42 Socket

F34 Interior fuse box

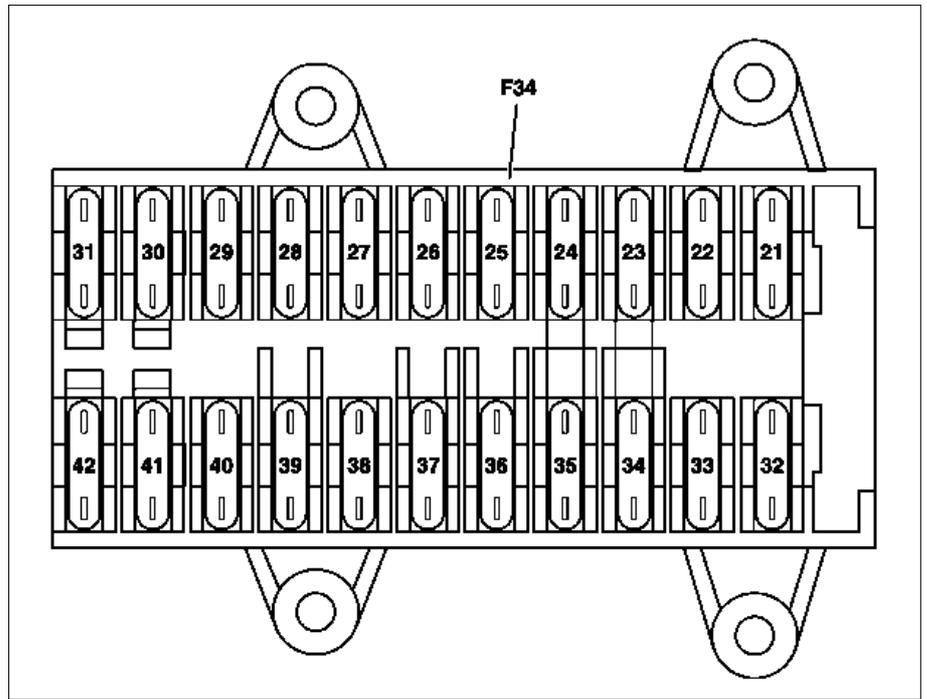

P54.15-2670-06

Bay	Fuse	Circuit	Fused line	Fused function	Rating in amperes (A)
21	F34f21	30	RDWH 2.5 mm <sup>2</sup>	<ul style="list-style-type: none"> <li>Left front door control unit (/)N69/1</li> </ul>	30
22	F34f22	30	RDGY 2.5 mm <sup>2</sup>	<ul style="list-style-type: none"> <li>Right front door control unit (/)N69/2</li> </ul>	30
23	F34f23	30	RDWH 0.75 mm <sup>2</sup>	<b>Up to 30.11.04:</b> <ul style="list-style-type: none"> <li>Central gateway control unit (N93)</li> </ul>	15
24	F34f24	30	RDPK 0.75 mm <sup>2</sup>	<b>Valid for code (819) CD changer (6CDs):</b> <ul style="list-style-type: none"> <li>CD player with changer (in glove compartment) (A2/6)</li> </ul>	7.5
25	F34f25	30	RDGN 2.5 mm <sup>2</sup>	<ul style="list-style-type: none"> <li>Upper control panel control unit (/)N72/1</li> </ul>	30
26	F34f26	30	RDVT 4.0 mm <sup>2</sup>	<b>Valid for code (810) sound system:</b> <ul style="list-style-type: none"> <li>Sound amplifier (/)A2/13</li> </ul>	25
27	F34f27	30	RDYE 2.5 mm <sup>2</sup> RDBU 4.0 mm <sup>2</sup>	<b>Valid for model 203.0/2 with code (275) Electrically adjustable driver seat, steering column and outside mirrors with memory (up to 29.2.04):</b> <ul style="list-style-type: none"> <li>Driver-side front seat adjustment control unit, with memory (N32/1)</li> </ul> <b>Valid for code (970) Police emergency vehicle:</b> <ul style="list-style-type: none"> <li>Special vehicle multifunction control unit (SVMCU [MSS]) (N26/9)</li> </ul>	30 30
28	F34f28	30	-	<ul style="list-style-type: none"> <li>Spare</li> </ul>	30
29	F34f29	30	RDYE 2.5 mm <sup>2</sup> RDYE 4.0 mm <sup>2</sup> RDBU 4.0 mm <sup>2</sup>	<b>Valid for model 203.7 with code (275) Electrically adjustable driver seat, steering column and outside mirrors with memory:</b> <ul style="list-style-type: none"> <li>Driver-side front seat adjustment control unit, with memory (N32/1)</li> </ul> <b>Valid for model 203.0/2 with code (275) Electrically adjustable driver seat, steering column and outside mirrors with memory (as of 1.3.04):</b> <ul style="list-style-type: none"> <li>Driver-side front seat adjustment control unit, with memory (N32/1)</li> </ul> <b>Valid for code (450) Taxi version:</b> <ul style="list-style-type: none"> <li>Special vehicle multifunction control unit (SVMCU [MSS]) (N26/9)</li> </ul>	30 30 30
30	F34f30	30	RDGN 4.0 mm <sup>2</sup>	<ul style="list-style-type: none"> <li>Heating systems recirculation unit (A32)</li> </ul>	40
31	F34f31	30	RDVT 1.5 mm <sup>2</sup>	<ul style="list-style-type: none"> <li>EIS [EZS] control unit (N73)</li> <li>Electric steering lock control unit (N26/5)</li> </ul>	20
32	F34f32	30	RDBK 2.5 mm <sup>2</sup>	<ul style="list-style-type: none"> <li>Left rear door control unit (/)N69/3</li> </ul>	30
33	F34f33	30	RDWH 2.5 mm <sup>2</sup>	<ul style="list-style-type: none"> <li>Right rear door control unit (/)N69/4</li> </ul>	30
34	F34f34	30	RDVT 1.5 mm <sup>2</sup> RDVT 1.5 mm <sup>2</sup>	<b>Valid for code (855) TELE AID (up to 31.5.01):</b> <ul style="list-style-type: none"> <li>Telephone and TELE AID transmitter/receiver, D2B (A35/17)</li> </ul> <b>Valid for code (853) MB standard telephone (up to 31.5.01):</b> <ul style="list-style-type: none"> <li>Telephone transmitter and receiver unit, D2B (A35/13)</li> </ul>	7.5 7.5

			RDVT 0.75 mm <sup>2</sup>	<p><b>Valid for code (386) Preinstallation for telephone "Handy", UPCI system (up to 31.5.01):</b></p> <ul style="list-style-type: none"> <li>● Telephone interface (A34/4)</li> <li>● E-net compensator (/)A28/3</li> </ul>	7.5
			RDVT 0.5 mm <sup>2</sup>	<p><b>Valid for code (386) Preinstallation for telephone "Handy", UPCI system (up to 31.5.01):</b></p> <ul style="list-style-type: none"> <li>● Cell phone separation point (X39/37)</li> </ul>	7.5
			RDGN 4.0 mm <sup>2</sup>	<p><b>Valid for model 203.0/2 with code (242) Electrically adjustable front passenger seat with memory:</b></p> <ul style="list-style-type: none"> <li>● Front passenger front seat adjustment control unit with memory (N32/2) (up to 31.3.04)</li> <li>● Front passenger front seat adjustment control unit with memory (N32/2) (as of 1.4.04)</li> </ul>	15 30
			RDGN 2.5 mm <sup>2</sup>	<p><b>Valid for model 203.7 with code (242) Electrically adjustable front passenger seat with memory (as of 1.4.04):</b></p> <ul style="list-style-type: none"> <li>● Passenger-side front seat adjustment control unit with memory (/)N32/2</li> </ul>	15
			RDWH 2.5 mm <sup>2</sup>	<p><b>Valid for code (450) Taxi version:</b></p> <ul style="list-style-type: none"> <li>● Special vehicle multifunction control unit (SVMCU [MSS]) (N26/9) (up to 31.5.03)</li> </ul>	15
			RDBU 2.5 mm <sup>2</sup>	<ul style="list-style-type: none"> <li>● Special vehicle multifunction control unit (SVMCU [MSS]) (N26/9) (as of 1.6.03)</li> </ul>	
			RDWH 4.0 mm <sup>2</sup>	<ul style="list-style-type: none"> <li>● Special vehicle multifunction control unit (SVMCU [MSS]) (N26/9) (as of 1.4.04)</li> </ul>	30
			RDWH 4.0 mm <sup>2</sup>	<p><b>Valid for code (970) Police emergency vehicle (as of 1.6.01):</b></p> <ul style="list-style-type: none"> <li>● Special vehicle multifunction control unit (SVMCU [MSS]) (N26/9)</li> </ul>	15
			RDVT 1.5 mm <sup>2</sup>	<p><b>Valid for code (498) Japan version (up to 31.5.01):</b></p> <ul style="list-style-type: none"> <li>● E-call control unit (A35/8)</li> </ul>	7.5
35	F34f35	30	RDBK 2.5 mm <sup>2</sup>	<p><b>Valid for code (228) stationary heater:</b></p> <ul style="list-style-type: none"> <li>● STH heater unit (A6) (up to 31.3.04)</li> <li>● STH heater unit (A6) (as of 1.4.04)</li> </ul>	30 20
36	F34f36	30	RDYE 1.5 mm <sup>2</sup>	<p><b>Valid for code (970) Police emergency vehicle (up to 31.3.04):</b></p> <ul style="list-style-type: none"> <li>● Interior socket (X58/1)</li> </ul>	30
			RDYE 1.5 mm <sup>2</sup>	<p><b>Valid for engine (612.990) (up to 29.2.04):</b></p> <ul style="list-style-type: none"> <li>● Charge air cooler circulation pump (M44)</li> </ul>	15
			RDVT 1.5 mm <sup>2</sup>	<p><b>Valid for code (498) Japan version (as of 1.4.04):</b></p> <ul style="list-style-type: none"> <li>● Audio gateway control unit (/)N93/1</li> </ul>	15
			RDVT 0.75 mm <sup>2</sup>	<p><b>Valid for code (386) Preinstallation for telephone "Handy", UPCI system (as of 1.4.04):</b></p> <ul style="list-style-type: none"> <li>● Universal Portable CTEL Interface (UPCI [UHI]) control unit (/)N123/1</li> </ul>	7.5
37	F34f37	30	RDWH 2.5 mm <sup>2</sup>	<ul style="list-style-type: none"> <li>● Brake booster vacuum pump control unit (N65/3) (up to 29.2.04)</li> </ul>	25
			RDYE 1.5 mm <sup>2</sup>	<p><b>Valid for engine 612.990 (as of 1.3.04):</b></p> <ul style="list-style-type: none"> <li>● Charge air cooler circulation pump (M44)</li> </ul>	25
38	F34f38	30	RDGN 2.5 mm <sup>2</sup>	<p><b>Valid for model 203.0/2 with code (242) Electrically adjustable front passenger seat with memory (up to 29.2.04):</b></p> <ul style="list-style-type: none"> <li>● Passenger-side front seat adjustment control unit with memory (/)N32/2</li> </ul>	30
			RDWH 4.0 mm <sup>2</sup>	<p><b>Valid for code (970) Police emergency vehicle (as of 1.4.04):</b></p> <ul style="list-style-type: none"> <li>● Special vehicle multifunction control unit (SVMCU [MSS]) (N26/9)</li> </ul>	30
39	F34f39	30	-	<ul style="list-style-type: none"> <li>● Spare</li> </ul>	30
40	F34f40	30	RDGN 2.5 mm <sup>2</sup>	<p><b>Valid for model 203.7 with code (242) Electrically adjustable front passenger seat with memory:</b></p> <ul style="list-style-type: none"> <li>● Passenger-side front seat adjustment control unit with memory (/)N32/2</li> </ul>	7.5
			RDWH 2.5 mm <sup>2</sup>	<p><b>Valid for code (450) Taxi version (up to 31.5.01):</b></p> <ul style="list-style-type: none"> <li>● Special vehicle multifunction control unit (SVMCU [MSS]) (N26/9)</li> </ul>	30
			RDWH 2.5 mm <sup>2</sup>	<p><b>Valid for code (970) Police emergency vehicle (up to 31.5.01):</b></p> <ul style="list-style-type: none"> <li>● Special vehicle multifunction control unit (SVMCU [MSS]) (N26/9)</li> </ul>	30
			RDVT 0.75 mm <sup>2</sup>	<p><b>Valid for model 203.0/7 with code (460) Additional parts, Canadian vehicles (as of 1.6.01):</b></p> <ul style="list-style-type: none"> <li>● Via the trunk lid/FFS [RBA] separation point (X8/18) the trunk lid emergency release switch (S88/10) and the rear SAM control unit with fuse and relay module (N10/2)</li> </ul>	7.5
			RDVT 1.0 mm <sup>2</sup>	<p><b>Valid for model 203.0/7 with code (494) USA version:</b></p> <ul style="list-style-type: none"> <li>● Via the trunk lid/FFS [RBA] separation point (X8/18) the trunk lid emergency release switch (S88/10) and the rear SAM control unit with fuse and relay module (N10/2)</li> </ul>	7.5

			RDVT 0.75 mm <sup>2</sup>	<b>Valid for code (386) Preinstallation for telephone "Handy", UPCI system:</b> <ul style="list-style-type: none"> <li>● Universal Portable CTCL Interface (UPCI [UHI]) control unit (/)N123/1</li> </ul>	7.5
			RDVT 1.5 mm <sup>2</sup>	<b>Valid for code (853) MB standard telephone (as of 1.6.01):</b> <ul style="list-style-type: none"> <li>● Telephone transmitter and receiver unit, D2B (A35/13)</li> </ul>	7.5
			RDVT 0.5 mm <sup>2</sup>	<b>Valid for code (386) Preinstallation for telephone "Handy", UPCI system (as of 1.6.01):</b> <ul style="list-style-type: none"> <li>● Cell phone separation point (X39/37)</li> </ul>	7.5
			RDVT 1.5 mm <sup>2</sup>	<b>Valid for code (855) TELE AID (as of 1.6.01):</b> <ul style="list-style-type: none"> <li>● Telephone and TELE AID transmitter/receiver, D2B (A35/17)</li> </ul>	7.5
			RDVT 0.75 mm <sup>2</sup>	<b>Valid for code (386) Preinstallation for telephone "Handy", UPCI system (as of 1.6.01):</b> <ul style="list-style-type: none"> <li>● Telephone interface (A34/4)</li> <li>● E-net compensator (/)A28/3</li> </ul>	7.5
			RDVT 1.5 mm <sup>2</sup>	<b>Valid for code (498) Japan version (as of 1.4.04):</b> <ul style="list-style-type: none"> <li>● E-call control unit (A35/8)</li> </ul>	7.5
41	F34f41	30	RDBU 0.75 mm <sup>2</sup>	<b>Valid for vehicle without code (580) Automatic air conditioning, without code (581) Comfort automatic air conditioning:</b> <ul style="list-style-type: none"> <li>● HEAT control and operating unit (N18)</li> </ul>	7.5
			RDBU 0.75 mm <sup>2</sup>	<b>Valid for code (580) Automatic air conditioning:</b> <ul style="list-style-type: none"> <li>● AAC [KLA] control and operating unit (N22) (up to 31.5.01)</li> <li>● AAC [KLA] control and operating unit (N22) (as of 1.6.01)</li> </ul>	7.5
			RDBU 1.0 mm <sup>2</sup>		15
			RDBU 0.75 mm <sup>2</sup>	<b>Valid for code (581) comfort automatic air conditioning:</b> <ul style="list-style-type: none"> <li>● Comfort AAC [KLA] control and operating unit (N22/7) (up to 31.5.01)</li> </ul>	7.5
			RDBU 1.0 mm <sup>2</sup>	<ul style="list-style-type: none"> <li>● Comfort AAC [KLA] control and operating unit (N22/7) (as of 1.6.01)</li> </ul>	15
42	F34f42	30	RDYE 0.5 mm <sup>2</sup>	<ul style="list-style-type: none"> <li>● Instrument cluster (A1)</li> </ul>	7.5