


 
MODEL 208.3

- 1 Trunk lid lock
- 2 Lock cylinder housing
- 3 Latch housing
- 4 Screws
- 5 CL connection
- 6 Connector for remote trunk release
- 7 Seal
- 8 Striker eye
- 9 Screws

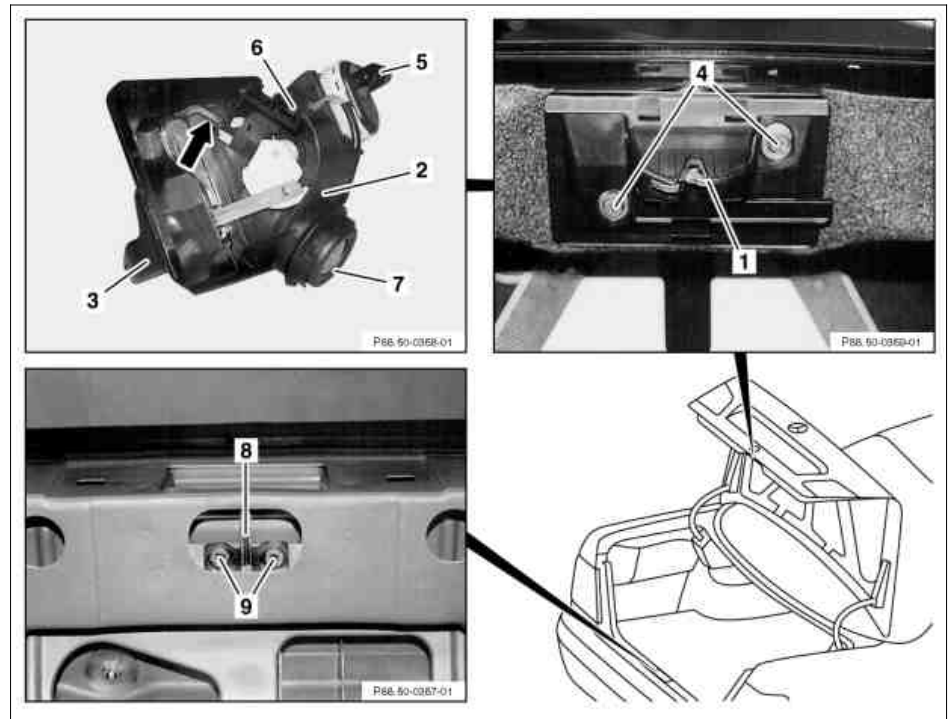


P88.50-0356-06

	Removal		
Danger!	Risk of injury from fingers being pinched or jammed when removing and installing and aligning hoods, doors, trunk lids/tailgates and sliding roof	When moving components ensure that no body parts or limbs are in the area of motion.	AS00.00-Z-0011-01A
1	Open trunk lid		
2	Unscrew screws (4) on trunk lid lock		
3	Remove trunk lid lock (1) from trunk lid		
4	Pull CL line (5) off of trunk lid lock and disconnect connector (6)		
5	Separate latch housing (3) from lock cylinder housing (2) by lifting arrest (arrow) and extending lock cylinder housing (2)		
6	Remove covering on rear center section		
7	Unscrew screws (9) and remove striker eye (8)		
	Installation		
8	Assemble latch housing (3) and lock cylinder housing (2)	Arrest (arrow) must engage	
9	Attach CL line (5) to CL element for trunk lid lock and connect connector for remote trunk release (6)		
10	Position trunk lid lock (1) in trunk lid	Ensure that seal (7) is seated correctly, install cutout downward, replace seal if damaged	
	Adjustment		
11	Align trunk lid lock	Screw in screws (4), tighten only lightly and align trunk lid lock so that lock cylinder housing (2) is positioned in the center of the seal (7) and that the edge of the lock housing (3) is parallel to the trunk lid.	
12	Tighten screws (4)	Screw on trunk lid lock	*BA88.50-P-1002-01A
13	Insert striker eye (8)		
14	Align striker eye (8) horizontally	Screw in screws (9), tighten only lightly and align striker eye (8) to the center of the trunk lid lock.	

15	Align striker eye (8) vertically	Adjust height of striker eye (8) so that the edges of the trunk lid and fender are flush and the trunk lid can be locked easily.	
16	Tighten screws (9)	 Screw on striker eye	*BA88.50-P-1004-01A
17	Adjust trunk lid		AR88.50-P-5200K
18	Close trunk lid and check for proper function		

 **Trunk lid**

Number	Designation		Models 208.3/4
BA88.50-P-1002-01A	Screw on trunk lid lock	Nm	10
BA88.50-P-1004-01A	Screw on striker eye	Nm	10

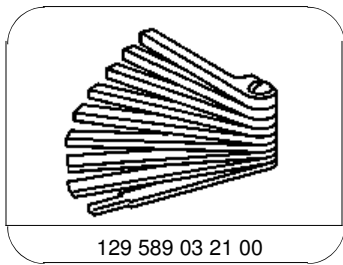

129 589 03 21 00

Feeler gauge