



## MODEL 209

- 1 Covering
- 2 Bolts
- 3 Catch lugs
- 4 Air nozzle

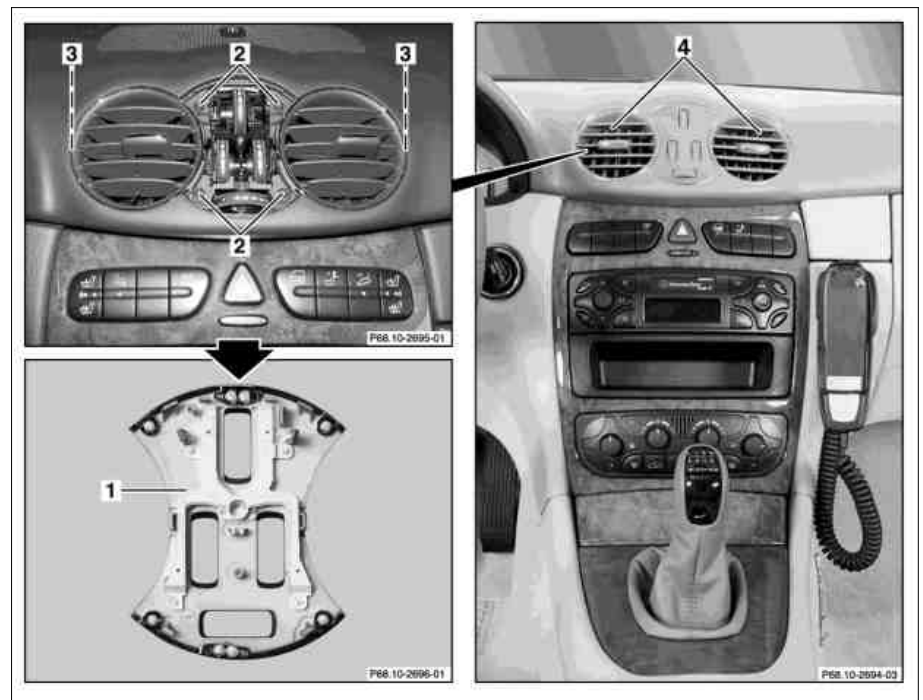

P68.10-2693-06

☒ ☒	Remove/Install		
1	Loosen covering (1) and remove	<b>i</b> Avoid damaging instrument panel.	
2	Unscrew bolt (2)		
3	Disengage catch lugs (3) in air nozzle duct	<b>S</b>	<a href="#">*140589023300</a>
4	Pull out air nozzle (4)		
5	Install in the reverse order		
6	Perform a function test	<b>i</b> It should be possible to open and close air distribution flap completely.	

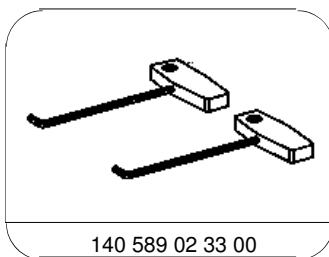

140 589 02 33 00

Pulling hook