


MODEL 209

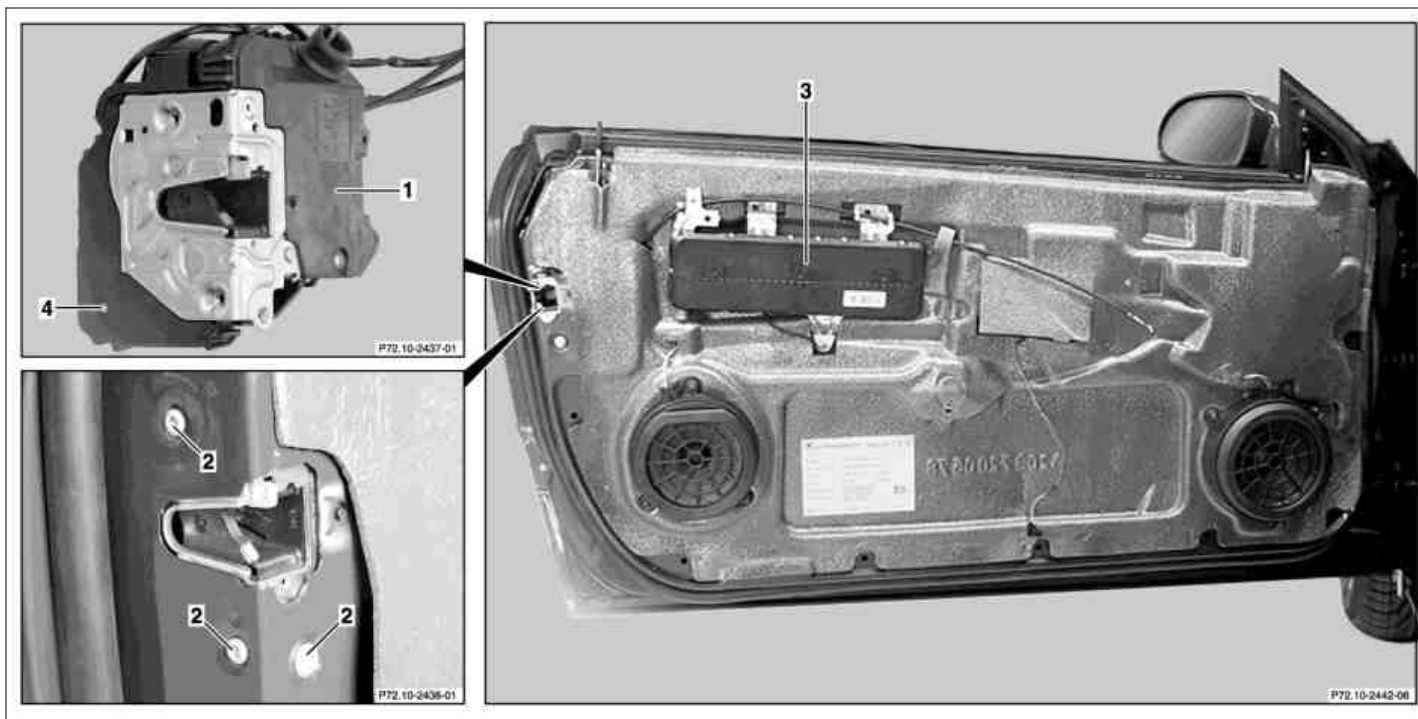


P72.10-2435-09

Shown on model 209.3

- 1 Door lock
- 2 Screw

3 Sidebag (model 209.3)

4 Screw

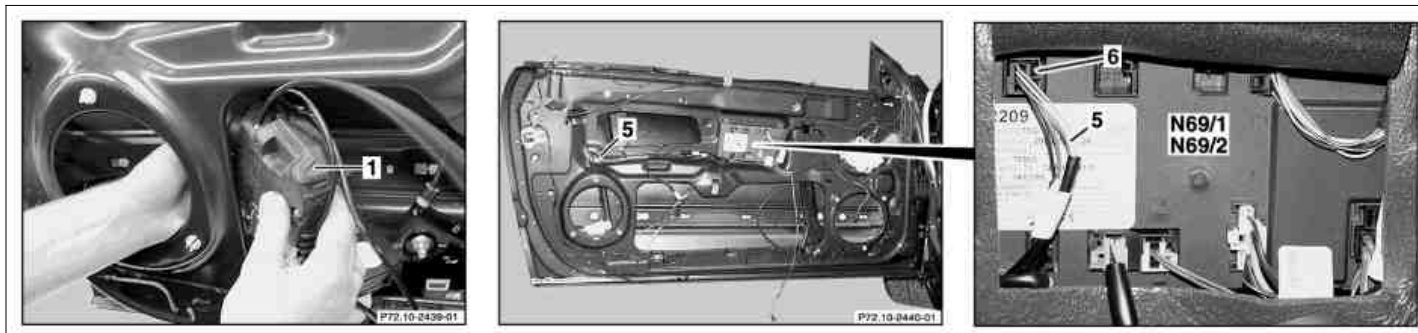

P72.10-2908-07

Shown on model 209.3

- 1 Door lock

5 Electrical line

6 Electrical connector

 
N69/1 Door control module left

N69/2 Door control module right

Modification notes

18.4.08	Value modified: Screw, self-adjusting clearance	*BA72.10-P-1012-01A
---------	---	---------------------

Remove/install		
1	Remove front door lining	AR72.10-P-1000Q
2	Remove sidebag (3)	Model 209.3 with sidebag AR91.60-P-0690Q
3	Remove speaker in front door	AR82.62-P-7845Q
4	Remove outside door handle on front door	AR72.10-P-2400Q
5	Loosen rear rail on power window and fold down	AR72.10-P-1800Q
6	Disconnect electrical connector (6) from left door control unit (N69/1) and right door control unit (N69/2)	

7	Expose electrical lines (5) up to door lock (1)		
8	Unscrew bolt (2)	Nm	*BA72.10-P-1006-01A
9	Take out door lock (1) through access opening		
10	Install in the reverse order		
11	Adjust play by loosening and tightening bolt (4)	 Left side: right-hand thread. Right side: left-hand thread. Nm	*BA72.10-P-1012-01A
12	Carry out function check		

 **Front door**

Number	Designation		Model 209
BA72.10-P-1006-01A	Screw at door lock	Nm	7
BA72.10-P-1012-01A	Screw, self-adjusting clearance	Nm	9