


 
P91.12-2534-03

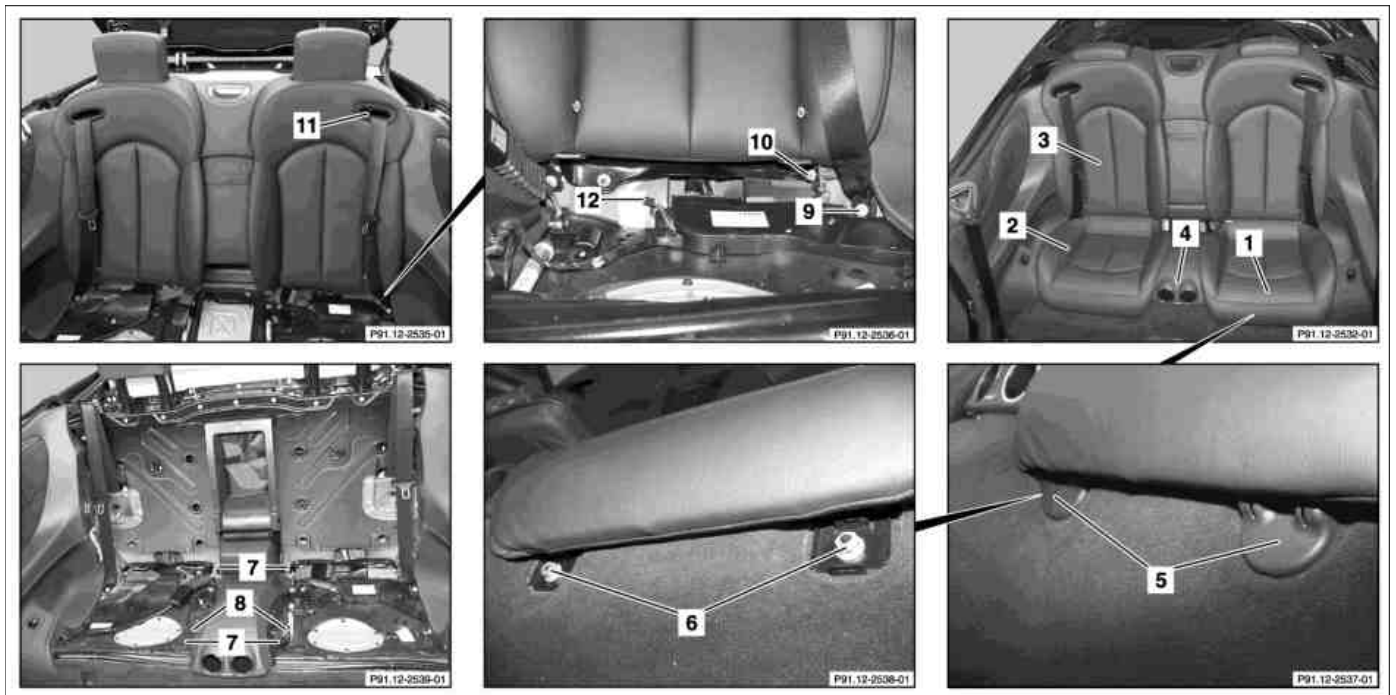

P91.12-2540-09

- | | | | |
|---|-------------------------|----|-------------|
| 1 | Left rear seat cushion | 7 | Nuts |
| 2 | Right rear seat cushion | 8 | Connector |
| 3 | Rear seat backrest | 9 | Screw |
| 4 | Rear center console | 10 | Nut |
| 5 | Cover | 11 | Plastic eye |
| 6 | Nuts | 12 | Connector |

	Remove/install		
⚠ Danger!	Risk of injury from roll bar extending	Before working in the area of the roll bar, pull out the rear head restraints by hand.	AS91.00-Z-0003-01QA
1	Lower soft top and leave soft top compartment lid open		
2	Move both front seats forward		
3	Remove covers (5).		

4	Remove nuts (6) of rear seat cushions (1 and 2)		
5	Pull out rear seat cushions (1 and 2) toward front		
6	Remove nuts (7) at rear center console (4)		
7	Disconnect and remove connector (8) at rear center console (4)		
8	Remove bolts (9)	 Screw at belt end fitting	*BA91.40-P-1001-01A
9	Loosen nuts (10)		
10	Unplug plug (12)		
11	Pull rear seat backrest (3) forward and then remove toward top; while doing so, guide seat belt through plastic eye (11)		
12	Install in the reverse order		

 **Seat belts/emergency tensioning retractors**

Number	Designation		Model 209.4
BA91.40-P-1001-01A	Screw on belt end fitting	Nm	30