


**TRANSMISSION 722.6 in MODEL 203, 209.3 /4**

**TRANSMISSION 722.9 in MODEL 203.052 /054 /056 /252 /254 /256 /752 /756, 209.354 /356 /372 /375 /376 /377 /454 /456 /472 /475 /476 /477**

**Illustrated on model 203**

- 1 Ignition lock control cable
- 1b Retaining lug
- 1c Clutch
- 4 Screw
- 5 Electrical connector
  
- N15/5 Electronic selector lever module control unit

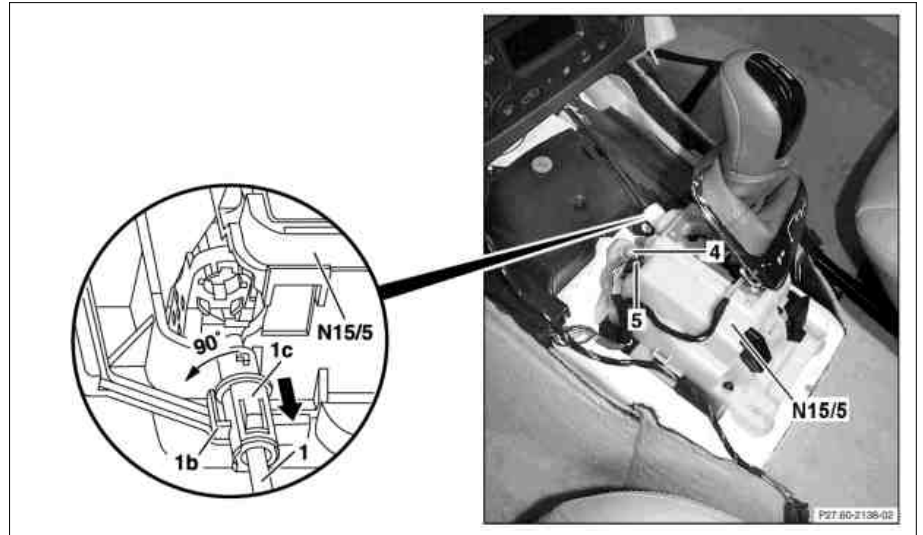

P27.60-2139-05

**Modification notes**

6.8.09	Locking plate of shift rod on intermediate lever modified	<b>BT27.60-P-0021-01A</b>
--------	---	---------------------------

		<b>Remove/install</b>	
⚠	<b>Danger!</b>	<b>Risk of death</b> caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.
	1	Raise vehicle with vehicle lift	<b>AR00.60-P-1000P</b>
BT	2	Unhook shift rod from intermediate lever from below Locking plate of shift rod on intermediate lever modified	<b>BT27.60-P-0021-01A</b>
	3	Lower vehicle with lifting platform	
	4	Remove selector lever handle with covering	Model 203, 209.3 with mechanism 722.6 up to 30.4.02 Model 203, 209.3 with mechanism 722.6 from 1.5.02 Model 209.4 with transmission 722.6 Model 203, 209 with transmission 722.9  <div style="text-align: right;"><b>AR27.60-P-0905P</b> <b>AR27.60-P-0905PA</b></div>
	5	Remove center console	Model 203 Model 209 without code P98 Black Series Model 209 with code P98 Black Series  <div style="text-align: right;"><b>AR68.20-P-2000P</b> <b>AR68.20-P-2000Q</b> <b>AR68.20-P-2000QBS</b></div>
	6	Detach ignition switch control cable (1) at electronic selector lever module control unit (N15/5).	<b>i</b> Compress the retaining lug (1b) and press the coupling (1c) against the spring force into the electronic selector lever module control unit (N15/5), twist 90° (to the right or left) and detach cable of ignition switch (1).
	7	Unscrew bolt (4)	<b>*BA27.60-P-1001-02A</b>
	8	Disconnect electrical connector (5)	
	9	Remove electronic selector lever module control unit (N15/5)	
	10	Install in the reverse order	
	11	Adjusting shift rod	<b>AR27.60-P-0980P</b>
	12	Connect STAR DIAGNOSIS, read out and erase fault memory	

**Nm Tightening torques for floor shift**

Number	Designation	Trans- mission 722.6	Trans- mission 722.9

BA27.60-P-1001-02A	Bolt, floor selector to body	Nm	6	6
--------------------	------------------------------	----	---	---