



P91.45-2007-09

- | | | | | | |
|---|-------------------------|---|--------------------|---|----------------------|
| 1 | Screw | 3 | Seat belt | 5 | Electrical connector |
| 2 | Seat belt guide bracket | 4 | Seat belt extender | 6 | Nuts |

Modification notes

3.3.04	"Disconnect/connect battery ground line" removed		
--------	--	--	--

Remove/install		
1.1	Remove upper section of side paneling	Model 209.3 AR68.30-P-4780Q
1.2	Remove rear passenger compartment side trim panel	Model 209.4 AR68.30-P-4780QA
2	Unscrew bolt (1)	Nm *BA91.40-P-1005-01A
3	Remove seat belt guide bracket (2)	i Installation: Do not twist seat belt (3).
4	Guide seat belt (3) through seat belt extender (4)	i Installation: Observe installation position of seat belt (3).
5	Disconnect electrical connector (5)	
6	Unscrew nuts (6)	
7	Remove seat belt extender (4)	
8	Install in the reverse order	
9	Carry out function check	

Nm Seat belts/emergency tensioning retractors

Number	Designation		Model 209.3	Model 209.4
BA91.40-P-1005-01A	Screw in rear upper belt guide fitting	Nm	30	30