

P67.30-2115-09

1 Rear side window


2 Bolt

3 Bolts

	<b>Remove/install</b>		
<b>⚠ Danger!</b>	<b>Risk of injury</b> due to hands being crushed when window glass is not secure	Secure window to prevent it from falling down.	AS67.00-Z-0002-01A
1	Open soft top		
2	Press outer trim strip off with assembly wedge and remove.	<b>i</b> <b>Installation:</b> Check whether cap at outer end of trim strip is seated properly, if necessary press on or install. 	*110589035900
3	Press outer sealing rail off with assembly wedge and lay down to side.	<b>i</b> <b>Installation:</b> Align outer sealing rail and insert. 	*110589035900
4	Remove cover from side paneling in rear		
5	Remove plug		
6	Move up rear side window (1) until bolt (2) is visible		
7	Unscrew bolt (2).		*BA67.30-P-1001-01B
8	Move up rear side window (1) and secure against falling down.		
9	Remove bolts (3)		*BA67.30-P-1001-01B
10	Remove rear side window (1) upward		
11	Install in the reverse order		
12	Adjusting rear side windows		AR67.30-P-4200QA

Side windows

Number	Designation	Model 209
BA67.30-P-1001-01B	Screw for rear side widow on window lift mechanism	Nm 9

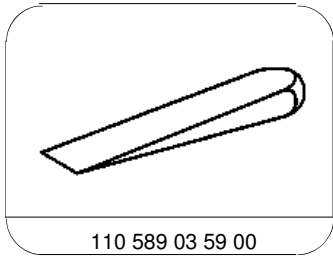

110 589 03 59 00

Mounting wedge