



MODEL 209.4

1 Roll bar unit

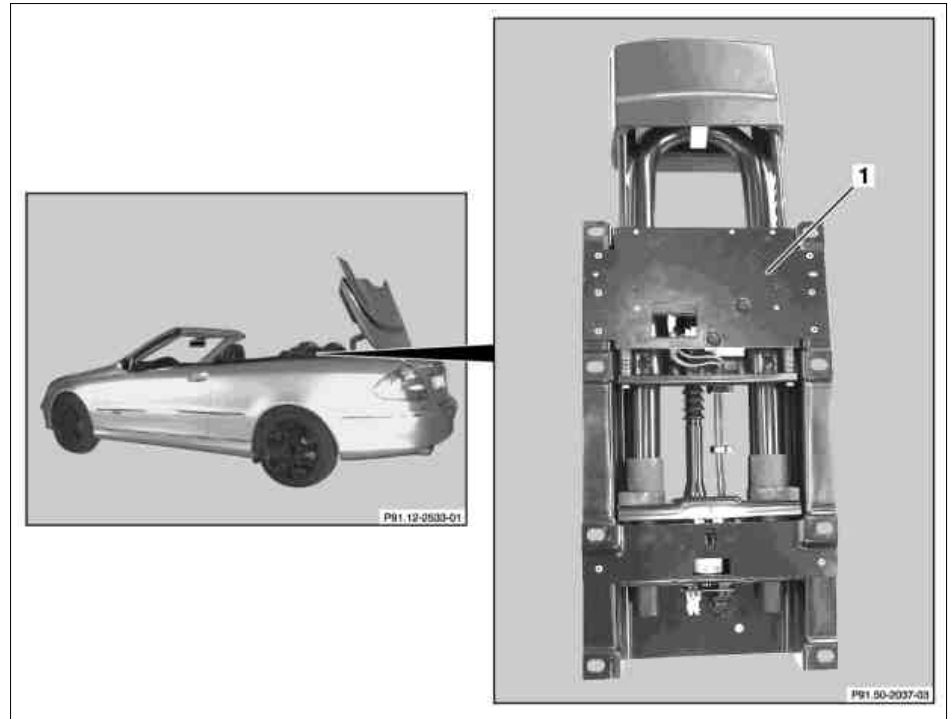

P91.50-2038-06

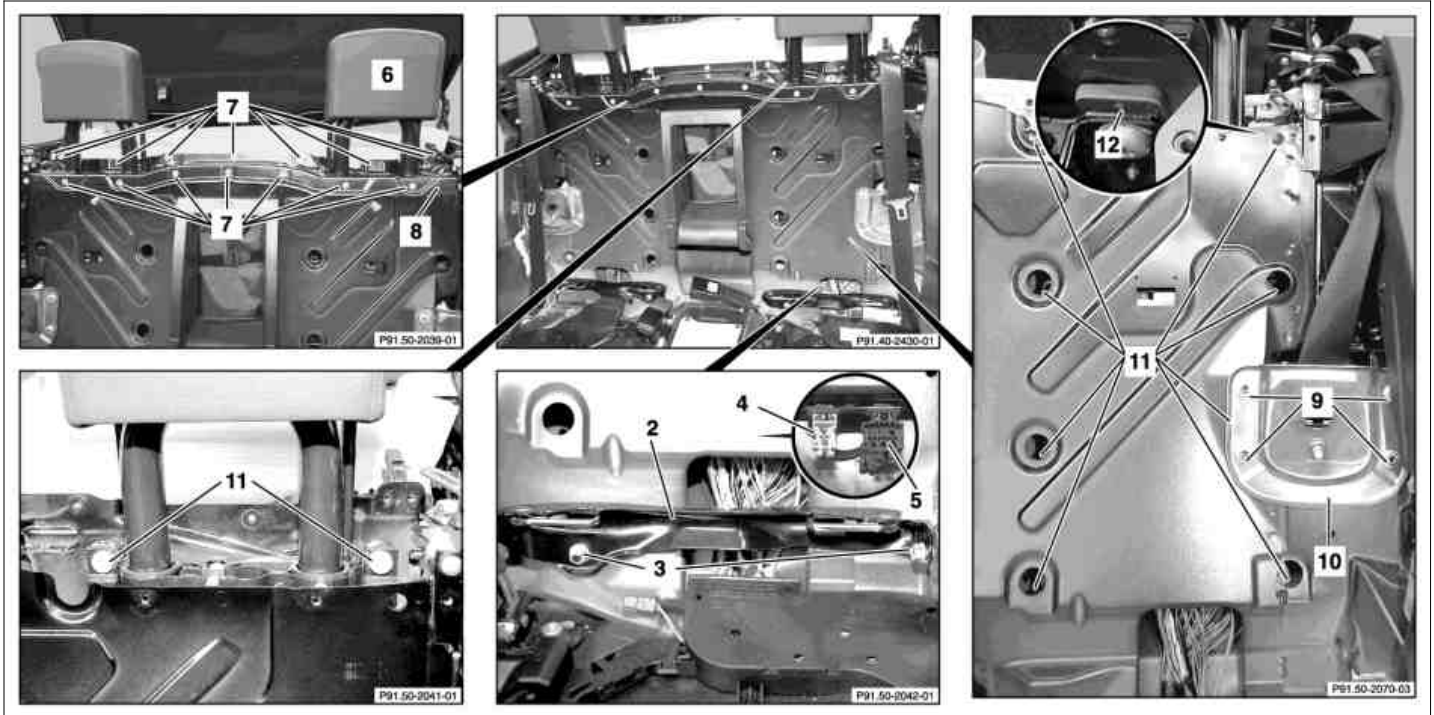

P91.50-2071-09

- 2 Child seat bracket
- 3 Nuts
- 4 Connector
- 5 Connector
- 6 Head restraint
- 7 Bolts

- 8 Cover for roll bar box
- 9 Nuts
- 10 Automatic belt retractor with retaining panel
- 11 Bolts
- 12 Shim plates




Remove/install

⚠ Danger!	Risk of injury when performing check and repair work in area of roll bar	Before working in the area of the roll bar, pull out the rear head restraints by hand. Keep body parts out of the area where the roll bar extends.	AS91.00-Z-0003-01QA
⚠ Danger!	Risk of injury caused by moving parts that can pinch, crush or, in extreme cases even sever extremities.	No parts of the body or limbs should be within the operating range of the mechanism when components are in motion.	AS00.00-Z-0009-01A
1	Remove rear seat and rear seat backrest		AR91.12-P-1700QA
2	Completely open soft top		
3	Pull head restraints (6) upwards		
4	Completely move up rollover bar	i See owner's manual.	
5	Unscrew nuts (3) and remove child seat bracket (2)		
6	Detach plugs (4 and 5)		
7	Remove bolts (7)	T Torx bit set	*000589011000
8	Remove cover from roll bar box (8)		
9	Unscrew nuts (9).		
10	Remove automatic belt retractor with retaining panel (10) and place to one side		
11	Remove bolts (11)	Nm Screw of rollover bar unit to body	*BA91.50-P-1001-01A
12	Remove shim plates (12)		
13	Remove roll bar unit (1)	⚠ Avoid damage to paint and trim	
14	Install in the reverse order		

Nm Roll bar mechanism

Number	Designation	Type	209.4
BA91.50-P-1001-01A	Screw of rollover bar unit to body	Nm	46

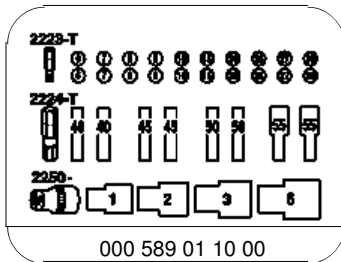

Torx bit set