

|                     |                   |                                       |         |
|---------------------|-------------------|---------------------------------------|---------|
| <b>VIN</b>          | WDB2110701A123456 | <b>Model series/model designation</b> | 209.375 |
| <b>Order number</b> |                   | <b>License plate</b>                  |         |

Check power supply of component B48 (Front passenger seat occupied and child seat recognition).

**Test prerequisite :**

- Relevant fault codes exist or a complaint has been received.

**Status of the relevant fault codes:**

Current fault code 'B106D The component or the signal line to the component B48 (Front passenger seat occupied and child seat recognition) has  $\overline{\text{---}}$  not present

Current fault code 'B106E The component or the signal line to the component B48 (Front passenger seat occupied and child seat recognition) has  $\text{---}$  or  $\overline{\text{---}}$  not present

**Test sequence :**

- Withdraw ignition key.
- Detach socket at component B48 (Front passenger seat occupied and child seat recognition).
- (B48) 3  $\leftarrow \text{---} \rightarrow$  1 (B48)
- Turn ignition key to position 1.

**Specified value: :**

- Voltage 11-14 V

**Question :**

- Is the actual value o.k.?

**Filename:** F:\Programme\Das\trees\PKW\SRS\ABZK\PS\PSCB48u.S

**Cell co-ordinate:** 7 , 9