



P88.50-2317-09

- |   |                |   |                          |   |             |
|---|----------------|---|--------------------------|---|-------------|
| 1 | Trunk lid lock | 4 | Bolt                     | 7 | Striker eye |
| 2 | Bolt           | 5 | Cover for lock actuation | 8 | Bolt        |
| 3 | Lock actuation | 6 | Control cable            |   |             |

**Modification notes**

3.3.04	Disconnect/connect/remove ground lead from battery		
--------	--	--	--

№	Remove/Install		
1	Remove outer paneling at trunk lid	Model 209.3 Model 209.4	AR88.50-P-5080Q <b>AR88.50-P-5080QA</b>
2	Disconnect electrical connector (1) from trunk lid lock		
3	Unscrew bolts (2)		
4	Remove trunk lid lock (1)		
5	Disconnect electrical connector from lock actuation (3)		
6	Remove bolts (4)		
7	Remove lock actuation (3)		
8	Open lock actuation cover (5)		
9	Detach cable (6)		
10	Remove bolts (8)		
11	Remove striker eye (7)		
12	Install in the reverse order		
13	Perform a function test		
	<b>Adjust</b>		
14	Slacken bolts (2)		
15	Align trunk lid lock (1) in center to recess in trunk lid		
16	Tighten bolts (2)	Nm	*BA88.50-P-1002-01A
17	Loose bolts (8)		
18	Align striker eye (7) in center in relation to trunk lid lock (1)	<b>i</b> The edges of the trunk lid should be aligned with the fenders .	
19	Tighten bolts (8)	Nm	*BA88.50-P-1004-01A

**Test and adjustment values for gap dimensions**

Number	Designation	Model 209.3	Model 209.4

BE60.00-P-1003-01G	Size of gap	Trunk lid to top of rear fender	Dimension "G"	mm	3.5 ( $\pm 0.5$ )	3.5 ( $\pm 1$ )
		Trunk lid to taillamp	Dimension "H"	mm	3.5 ( $\pm 0.5$ )	3.5 ( $\pm 0.5/+1$ )
		Trunk lid to bumper	Dimension "I"	mm	5 (-1)	6.5 (+1)
		Rear fender to taillamp	Dimension "J"	mm	2 ( $\pm 0.5$ )	3 ( $\pm 1$ )
		Trunk lid cover to taillamp	Dimension "K"	mm	-	2.5 ( $\pm 0.5$ )
		Fig. see				AR60.00-P-0700-01Q

**Nm** Trunk lid

Number	Designation		Model 209
BA88.50-P-1002-01A	Bolt on trunk lid lock	Nm	9
BA88.50-P-1004-01A	Bolt to striker eye	Nm	9