



P88.50-2508-07

1 Lock cylinder
2 Trunk lid handle
3 Emergency key

4 Lock housing
5 Cylinder lock housing

6 Allen wrench a/f 1.5
7 Retainer tab

☒	Remove		
1	Remove trunk lid handle (2) with lock cylinder (1)		AR88.50-P-5020Q
2	Insert emergency key (3) into lock cylinder (1)		
3	Turn lock cylinder (1) 45° counterclockwise with emergency key	<p>i The opening (arrow) in the lock housing (4) should coincide with the corresponding removal hole in the lock cylinder housing (5).</p>	
4	Insert Allen wrench a/f 1.5 (6) into opening (arrow) and press retainer tab (7) on lock cylinder (1)	<p>i So that lock cylinder (1) unlocks.</p>	
5	Pull lock cylinder (1) on emergency key (3) out of lock cylinder housing (5)		
☒	Install		
6	Arrest lock cylinder (1) in lock cylinder housing (5)	<p>⚠ Carefully turn lock cylinder (1) in lock cylinder housing (5) to prevent damaging the retainer tab (7).</p> <p>i Insert lock cylinder (1) with inserted emergency key (3) into lock cylinder housing (5) and turn counterclockwise until lock cylinder (1) locks in lock cylinder housing (5).</p> <p>i While locking press lock cylinder (1) against spring located in lock cylinder housing (5)</p>	
7	Install trunk lid handle (2) with lock cylinder (1)		AR88.50-P-5020Q