
MODEL 209.3 with CODE (581) Convenience automatic air conditioning

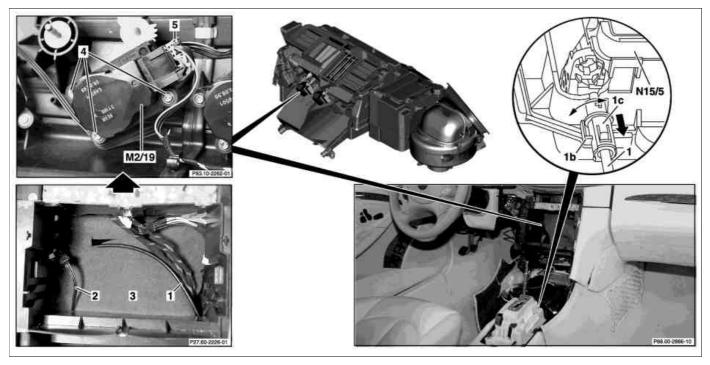

P83.10-2431-09

- 1 Ignition lock control cable
- 1b Locating tab
- 1c Clutch

- 2 Electrical line
- 3 Vapor barrier
- 4 Bolts
- 5 Electrical connector

M2/19 Left fresh air flap positioning

N15/5 Electronic selector lever module

control unit

Modification notes

18.2.04	Disconnect/connect/remove ground lead from battery	

XX	Remove/Install		
1.1	Remove operating / display unit with control unit	up to 31.5.04 with COMAND operating and display system code 352, with Japan version code 498	AR82.85-P-7472Q
		as of 1.6.04 with Japan version code 498, with COMAND	AR82.85-P-7472QA
		APS (with navigation) code 527, with COMAND APS USA (with navigation) code 530	
.2	Remove radio	up to 31.5.04,	AR82.60-P-7502Q
		up to 31.5.04 with MB Audio 10 CD radio with VK/RDS code 756	
		as of 1.6.04	AR82.60-P-7502QA
		Up to 31.5.04 with Audio 30 APS code 353	AR82.61-P-7412P
		As of 1.6.04 with Audio 50 APS MB radio code 525	AR82.61-P-7412QA
.1	Remove stowage compartment below radio	With MB Audio 10 CC radio with VK/RDS,	
		with MB Audio 10 CD radio with VK/RDS, code 756	
	Remove lower section of instrument panel on driver side		AR68.10-P-1505Q
.1	Remove ignition switch cable (1) from the electronic selector lever module control unit (N15/5)	On vehicles with transmission 722 i Press locking tab (1b) together and push	
		coupling (1c) against the spring force into the electronic selector lever module control	
		unit (N15/5), twist through approx. 90° (right	
		or left) and pull off ignition lock control cable (1) (arrow).	
j	Push damping (3) up	Expose ignition lock control cable (1) and electrical line (2) at comfort AAC control and	
		operating unit (3-pin electrical connector).	
	Remove bolts (4)	operating and to pin diodinati definition).	
•	Remove vent flap actuator motor left (M2/19)		
	Disconnect electrical connector (5)		

9	Install in the reverse order		
10	Connect STAR DIAGNOSIS, normalize left		
	fresh air flap actuator (M2/19), read out and erase fault memory		
⊯ AD	Connect STAR DIAGNOSIS and read out fault memory		AD00.00-P-2000-04A
		STAR DIAGNOSIS diagnosis system	*WH58.30-Z-1048-13A
11	Perform function check		

Commercially available tools

Number	Designation	
WH58.30-Z-1048-13A	STAR DIAGNOSIS diagnosis system, Compact Passenger Car	6511 1801 00