


**Installation shown with COMAND
operating, display and control unit
(A40/3)**


- 7 Coupling for interface
- 8 Interface wiring harness
- 12 Radio adapter plug
- 14 Radio adapter connector

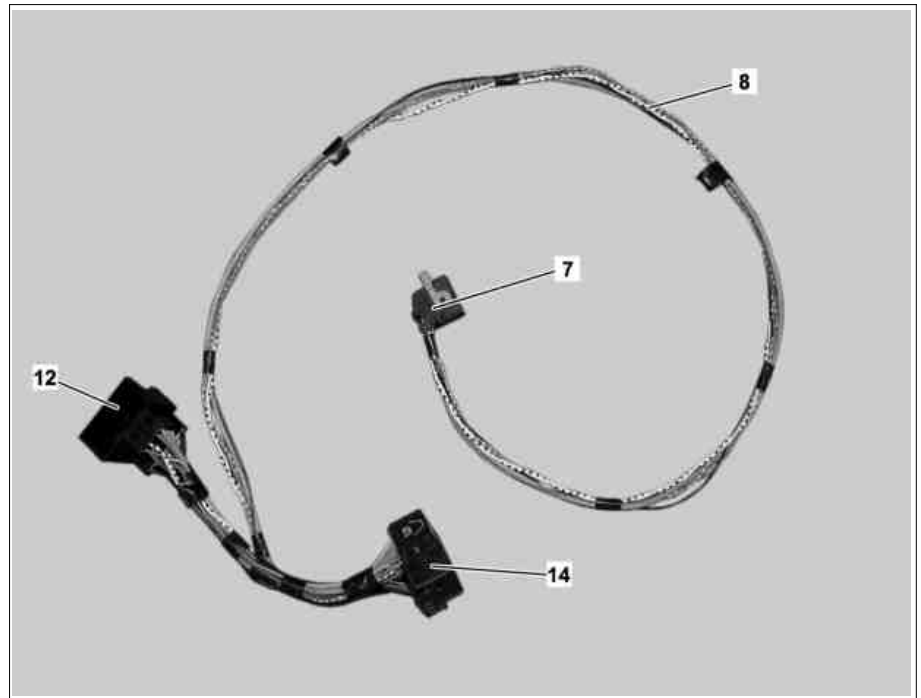

P82.60-4979-06


- 1 Remove MOST connector (22) from the standard radio connector and install in radio adapter connector (14) of the interface wiring harness.

⚠ Risk of breakage! Do not kink optical waveguide, route over sharp edges or bend in radii smaller than 25 mm. Tensile forces on inserts must not exceed 65 N. Do not squeeze fiber optical cable and do not compress with clamps or tie straps.

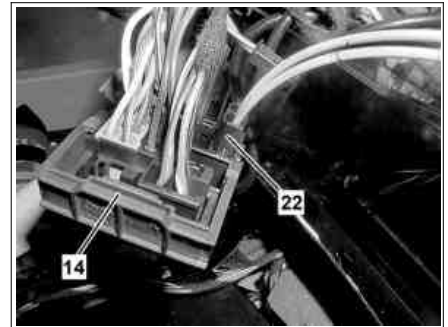

P82.70-5315-01

- 2 Connect standard radio connector (13) to radio adapter plug (12) of the interface wiring harness.
- 3 Connect radio adapter connector (14) of the interface wiring harness to COMAND operating, display and control unit (A40/3).

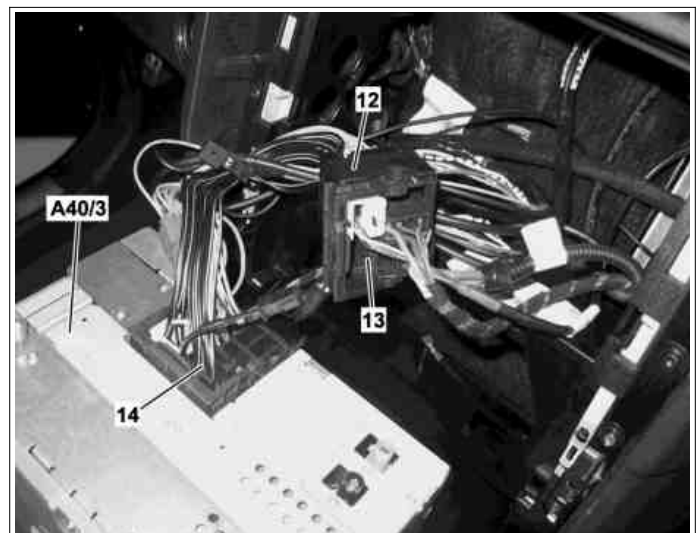


P82.70-5465-11

- 4 Route and secure interface wiring harness (8) with interface connector (7) from the radio recess in the front passenger footwell as shown in the figure.

i Interface connector (7) is connected to the iPod interface at a later time.

Shown on model 209.3 with iPod interface installed

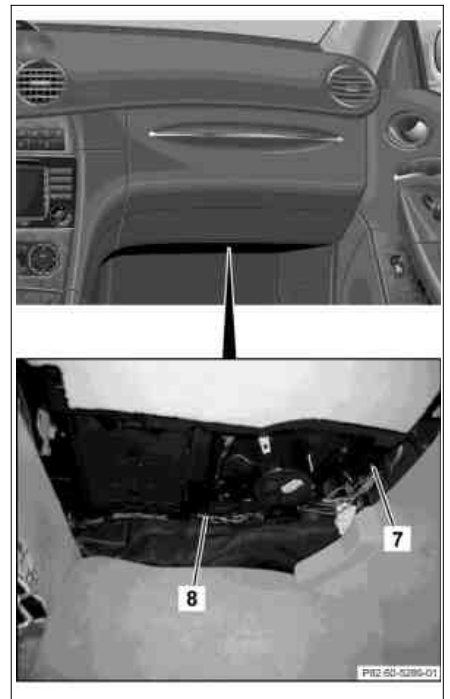

P82.60-5288-03