


ENGINE	271.940 in MODEL	203.042 /242 /742, 209.342 /442
ENGINE	271.941 in MODEL	211.042 /242
ENGINE	271.946 in MODEL	203.046 /246 /746
ENGINE	271.948 in MODEL	203.040 /240 /740
ENGINE	271.942 in MODEL	209.343, 203.043 /243 /743
ENGINE	271.921 in MODEL	203.730
ENGINE	271.955 in MODEL	209.341 /441
ENGINE	271.956 in MODEL	211.041 /241
ENGINE	271.957 in MODEL	203.741

6 Intake air duct



P09.41-2357-01

- 1 Hose
- 2 Charge air hose
- 3 Connection piece to pressure damper
- 4 Bolts
- 5 Wide band silencer

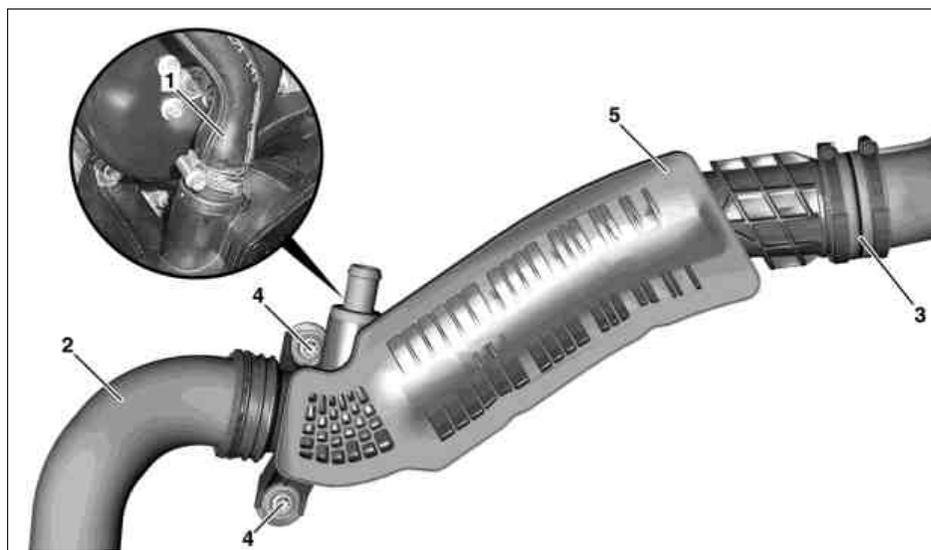

P09.41-2156-05

 	Remove/install		
1	Open engine hood	Model 203 Model 209 Model 211	AR88.40-P-1000P AR88.40-P-1000Q AR88.40-P-1000T
2	Remove intake air duct (6)		
3	Slacken hose clamp from hose (1)		
4	Detach hose (1) from wideband silencer (5)		
5	Slacken charge air hose (2) at wide band silencer (5)		
6	Slacken hose clamp at connection piece (3) to pressure damper	 Installation: Check hose clamp on connection piece (3) to pressure damper for damage, replace if necessary.	
7	Remove bolts (4)	Nm	*BA09.41-P-1003-02A
8	Remove wide band silencer (5)		
9	Install in the reverse order		

 Charge air duct

Number	Designation	Engine 271
BA09.41-P-1003-02A	Bolt, wide band silencer to timing case cover	Nm 14