


MODEL 230.4 except CODE (P99) "AMG Black Series" special model

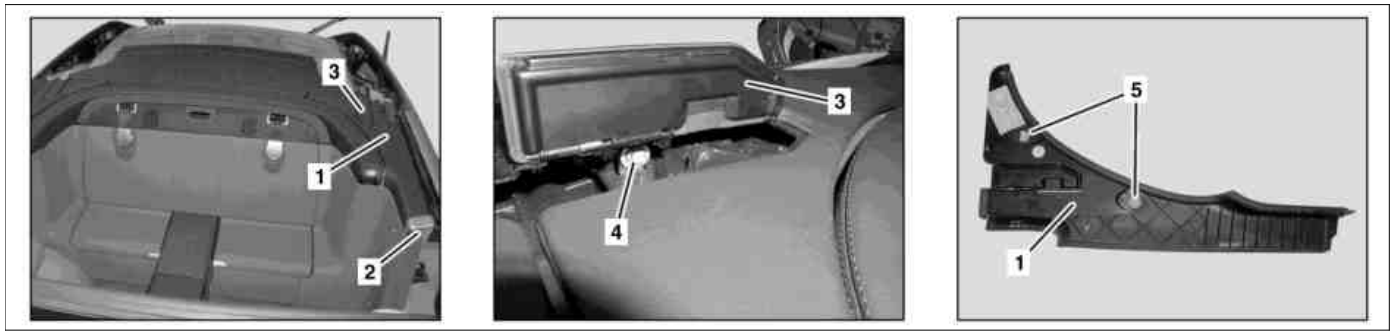



P68.30-2388-07

- 1 Trim
- 2 Panel

- 3 Cap
- 4 Screw

- 5 Clip

☒ ☒	Remove/install		
1	Completely open Vario roof		
2	Remove cover (2)		
3	Open cap (3) and loosen bolt (4).	i Installation: Align paneling (1) so that it does not make contact with intermediate bearing to prevent noises.	
4	Unclip paneling (1) from clips (5) with mounting wedge and remove from center console.		*110589035900
5	Install in the reverse order		

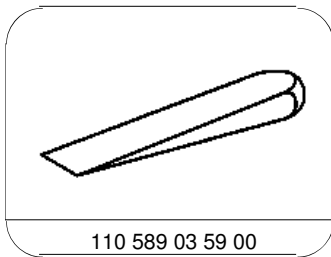

110 589 03 59 00

Mounting wedge