


MODEL 230.4 except CODE (P99) "AMG Black Series" special model

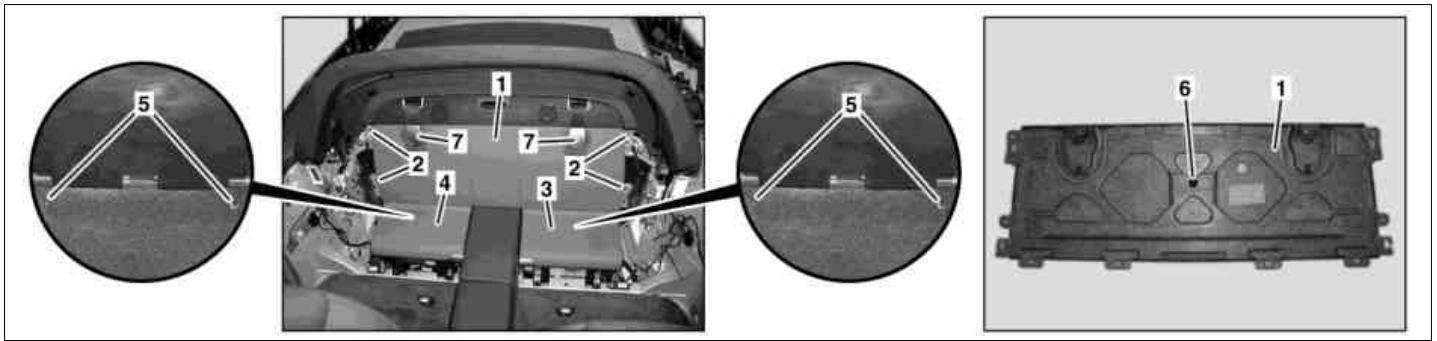



P68.30-3117-07

1 Rear wall paneling  
 2 Bolts  
 3 Left stowage box

4 Right stowage box  
 5 Bolts

6 Clip  
 7 Luggage belt

	Remove/install		
1	Remove left and right rear side paneling		AR68.30-P-4780R
2	Unscrew bolts (2) from rear wall paneling (1)		
3	Open left stowage box (3) and right stowage box (4)		
4	Unscrew bolts (5) in left stowage box (3) and right stowage box (4)		
5	Unhook luggage belts (7) from rear wall paneling (1).		
6	Unclip rear wall paneling (1) from clip (6) and remove from vehicle	 <b>Installation:</b> Replace damaged clip (6).	
7	Install in the reverse order		