


MODEL 230.4 except CODE (P99) "AMG Black Series" special model

- 1 Spring flap bolt
- 2 Clevis
- 3 Jam nut
- 4 Operating cable drive
- 5 Operating cable

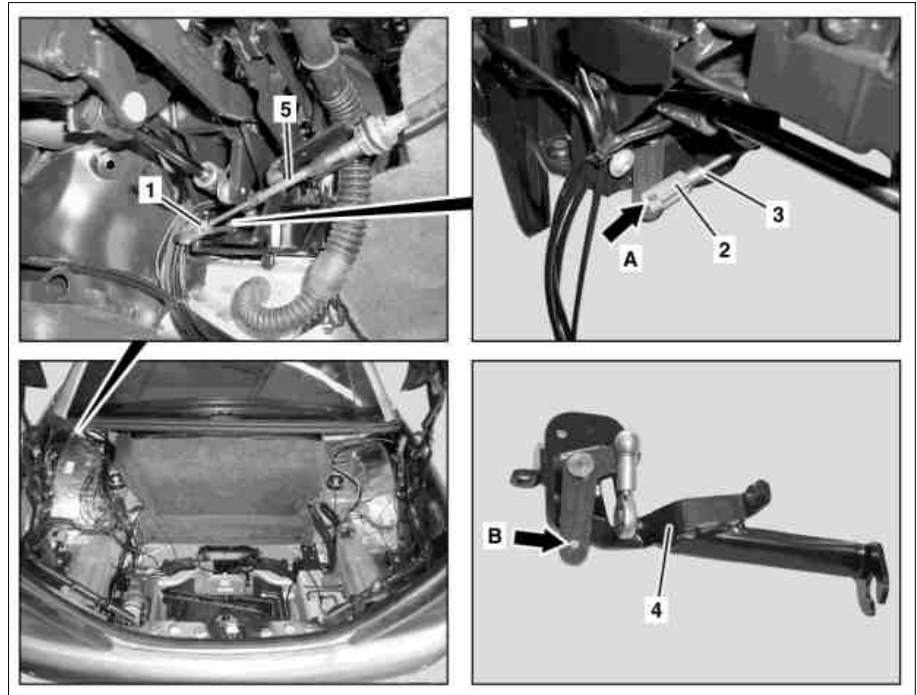

P77.30-2371-06

	Removing		
Danger!	Risk of injury caused by moving parts that can pinch, crush or, in extreme cases, even sever extremities	No parts of the body or limbs should be within the operating range of the mechanism when moving components.	AS00.00-Z-0009-01A
1	Remove left side paneling in trunk		AR68.30-P-4800R
2	Remove spring flap bolt (1) from clevis (2) of operating cable (5)		
3	Loosen counternut (3) on clevis (2)		
	Adjust		
4	Adjust clevis (2) until eye (arrow A) is flush with hole (arrow B) on operating cable drive (4)		
5	Turn clevis (2) two turns to right and tighten counternut (3).		
6	Move Vario roof approx. 5 cm below load assist position with Vario roof switch		
	Install		
7	Insert spring flap bolt (1) into clevis (2) and secure	Slightly fold in/out compensating strips on Vario roof rear shelf to facilitate installation. Replace damaged spring flap bolt (1)	
8	Completely close Vario roof with Vario roof switch and check whether compensating strips locks on Vario roof rear shelf; repeat adjustment if necessary.		
9	Install left side paneling in trunk		AR68.30-P-4800R