


MODEL 230.4 except CODE (P99) "AMG Black Series" special model

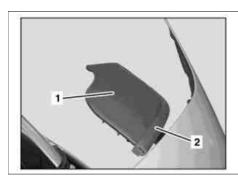

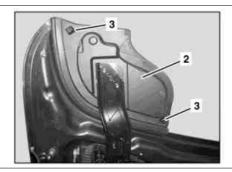

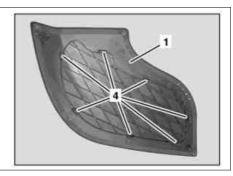

P77.30-2111-07


Shown on right side of vehicle

1 Cove

- 2 Side flap
- 3 Clip

4 Catch hook

XX	Remove/install		
1	Open trunk lid	i Vario roof must be closed.	
2	Press clips (3) together		
3	Unclip catch hook (4) with suitable driver and simultaneously press cover (1) off of side flap (2) with mounting wedge.	[A]	*110589035900
4	Install in the reverse order		

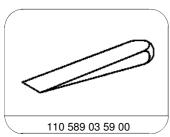

Mounting wedge