


MODEL 203.0 /2 (except 203.076 /276),
203.7## #A,
203.7## #E up to 035817

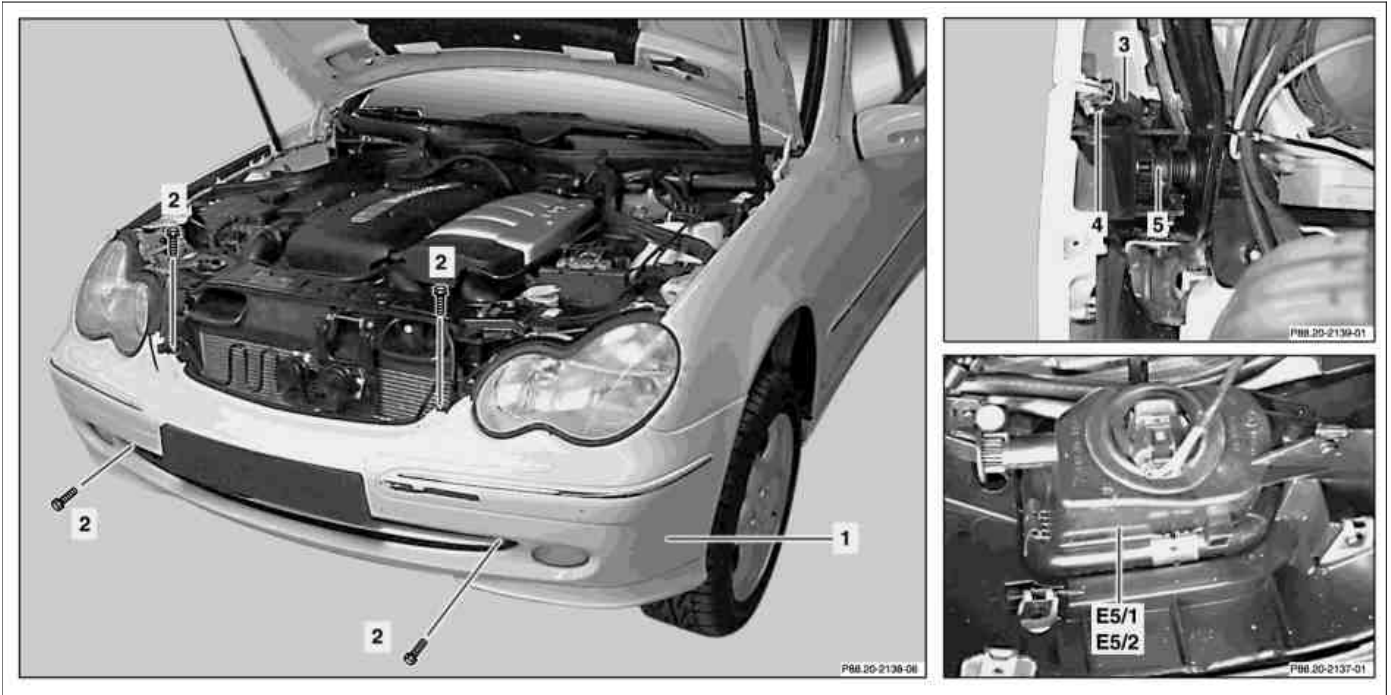

P88.20-2140-09

1 Bumper paneling
2 Screw
3 Retaining clip

4 Screw
5 Bracket

E5/1 Left front fog lamp
E5/2 Right fog lamp

	Remove/install		
1	Remove inner fender in both front fenders	Remove front fender liner and detach center fender liner	AR88.10-P-1300P
2	Unscrew bolt (4)		
3	Swivel anchor bracket (3) to middle of vehicle, pull back and take off		
4	Remove outside temperature indicator temperature sensor		AR54.30-P-6341P
5	Disconnect electrical connectors from left front fog lamp (E5/1) and right front fog lamp (E5/2)		
6	Remove bolts (2)		*BA88.20-P-1006-01A
7	Remove bumper paneling (1) toward front from left and right bracket (5)		
8	Install in the reverse order		
9	Check adjustment for left fog lamp (E5/1) and right fog lamp (E5/2), correct if necessary		
AP	Check and correct the adjustment of the headlamps		AP82.10-P-8260P

Bumper

Number	Designation		Model 203
BA88.20-P-1006-01A	Bolt, front bumper to crossmember	Nm	4