


P68.10-2338-07

☒ ☒	Removing, installing		
1	Open glove compartment cover		
2	Press handle on left side out of catch with assembly wedge	⚠ Adjust glove compartment lock (1) to lock position ☑ Assembly wedge	*110589035900
3	Remove handle together with glovecompartment lock	ⓘ <b>Installation:</b> Install spring (3) in guide (4).	
4	Press lock cylinder (1) out toward front with key	⚠ Do not remove key.	
5	Install in the reverse order		
6	Carry out operational check		

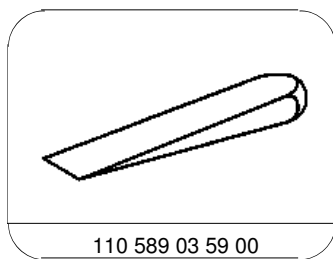

110 589 03 59 00

Assembly wedge