


MODEL 203.0 except CODE (540) Electric rear window roller blind

MODEL 209.3 except CODE (540) Electric rear window roller blind

MODEL 209.3 except CODE (P98) Black Series

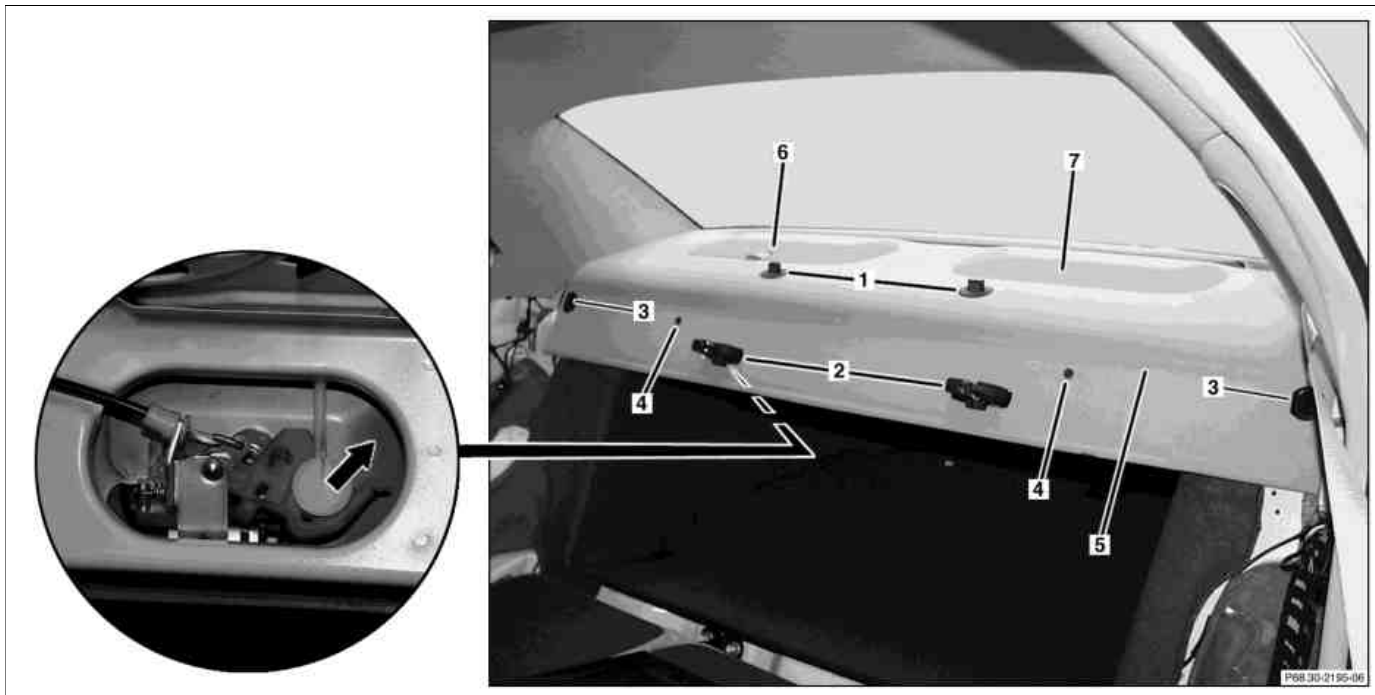

P68.30-2196-09


Shown on model 203.0 with code (287) Through-loading feature

- 2 Rear seat backrest lock
- 3 Catch
- 4 Expansion clips

- 5 Rear shelf
- 6 First-aid kit cover
- 7 Rear speaker cover


1 Locking controls

	Remove/install		
1.1	Remove rear seat backrest	Model 203.0 except code (287) Through-loading feature	AR91.12-P-1620PC
1.2	Unlock rear seat backrest in trunk and fold toward front	With code (287) Through-loading feature	
2.1	Unclip cover	Model 209.3	
3	Unhook locking controls (1) in trunk from the rear seat backrest lock (2).	With code (287) Through-loading feature	
4	Remove moldings from C-pillar	Model 203.0 Model 209.3	AR68.30-P-4490P AR68.30-P-4490Q
5.1	Remove side cushion on rear seat backrest	Model 203.0 with CODE (287) Through-loading feature	
6.1	Unclip catch (3).	Model 203.0 	*110589035900
7	Remove expansion clips (4)		
8.1	Unclip lock controls (1).	Model 203.0 with CODE (287) Through-loading feature 	*110589035900
9	Remove rear shelf (5).		
	Disassemble/assemble		
10	Open first-aid kit cover (6) and remove first-aid kit.		
11	Unclip first-aid kit frame and remove.		*115589035900
12	Unclip rear speaker cover (7) at front and remove.		*115589035900
13	Assemble in the reverse order		
14	Install in the reverse order		

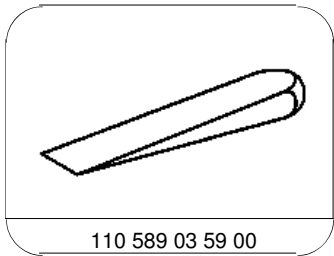

110 589 03 59 00

Mounting wedge

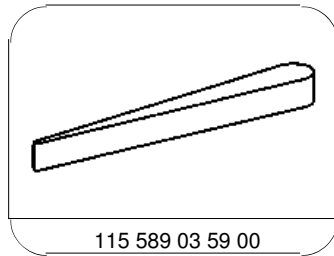

115 589 03 59 00

Long wedge