


MODEL 203 except CODE (581) Comfort automatic air conditioning

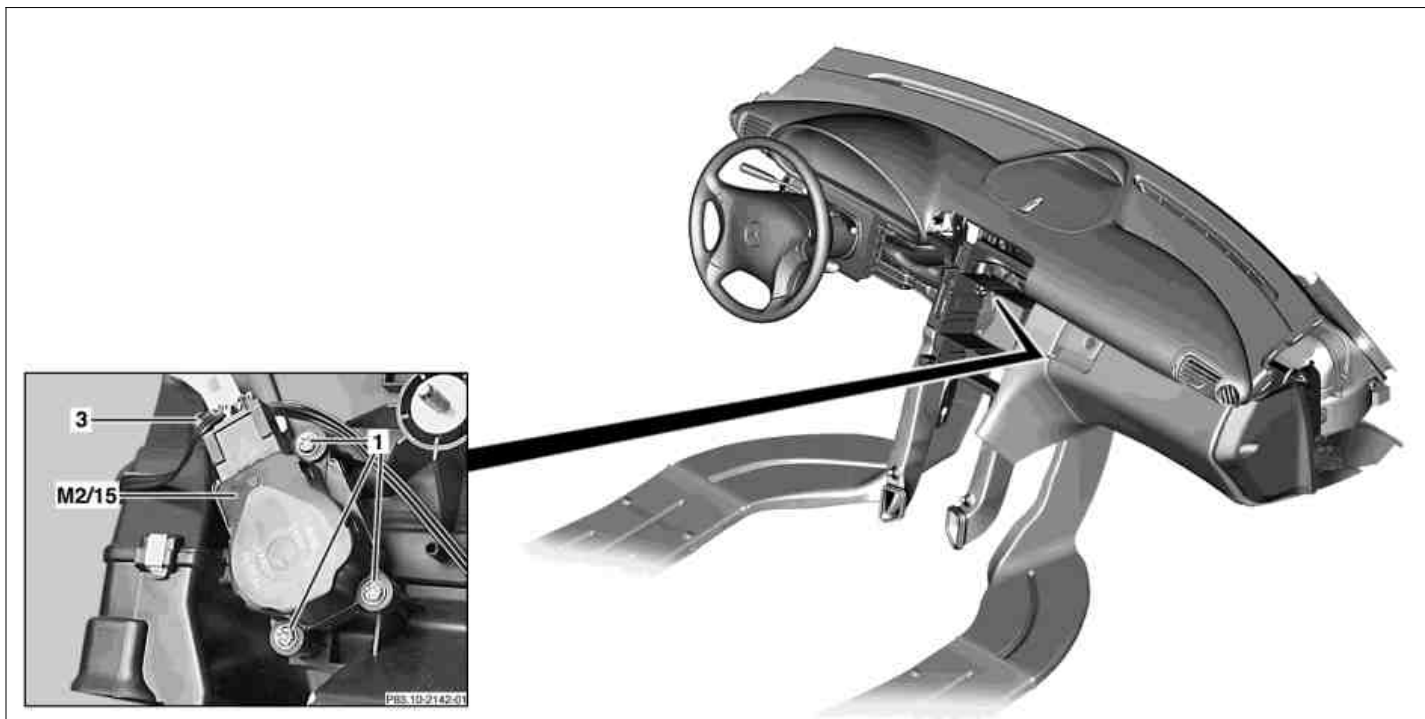


P83.10-2143-09

1 Bolts

3 Clutch

M2/15 Left and right footwell flaps actuator motor

- 1 Bolts
- 2 Offset screwdriver
- 3 Clutch
- 4 Instrument panel carrier
- M2/15 Left and right footwell flaps actuator motor

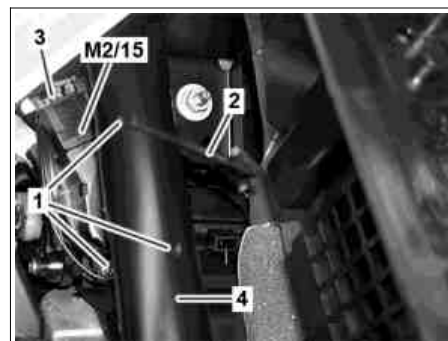

P83.10-2708-01

Modification notes

12.1.09	Step 1 modified		
---------	-----------------	--	--

	Remove/install		
1	Remove bottom section of dashboard on driver's side		AR68.10-P-1505P
2	Remove left air duct		
3	Remove bolt (1)	Torx offset screwdriver set: gotis://G_58.3_06.1	
4	Remove left and right footwell flaps actuator motor (M2/15) from heater/AC housing		
5	Disconnect connector (3) from left and right footwell flap actuator motor (M2/15)		
6	Install in the reverse order		
7	Synchronize left and right footwell flaps actuator motor (M2/15)		
	Connect STAR DIAGNOSIS and read out fault memory		AD00.00-P-2000-04A