


MODEL 203.0

- 1 Guard molding
- 2 Rear door
- 3 Bolt

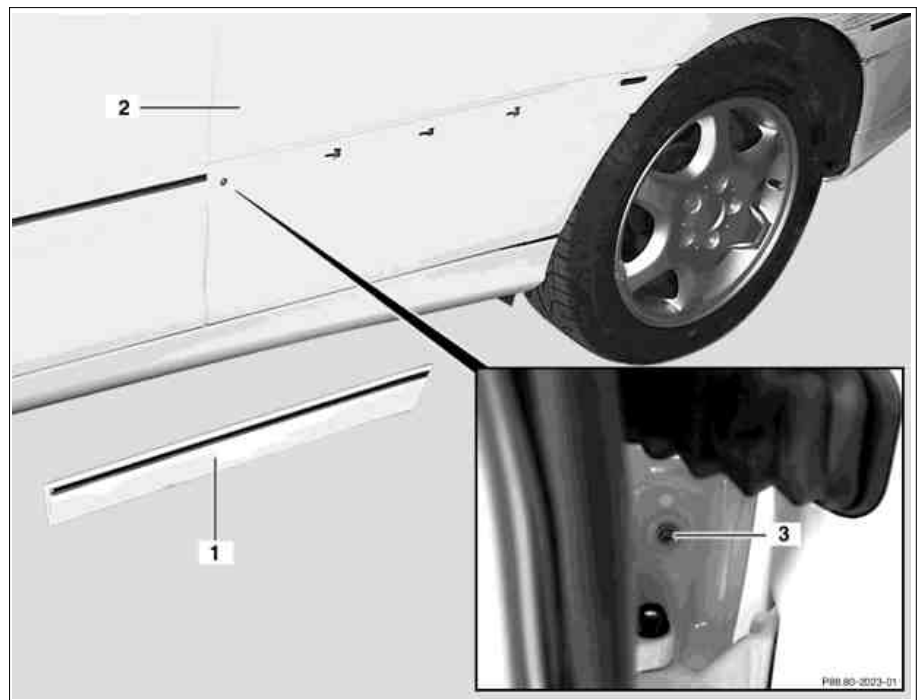

P88.80-2020-06

☒ ☒	Removing, installing		
1	Unscrew screw (3)		
2	Lift guard molding (1) at rear end and pull toward rear out of retaining clips	⚠ Avoid damaging paint.	
3	Install in the reverse order		