



Illustrated on model 203.0


- 1 Door handle
- 2 Screws
- 3 Lock trim surround
- 4 Door liner

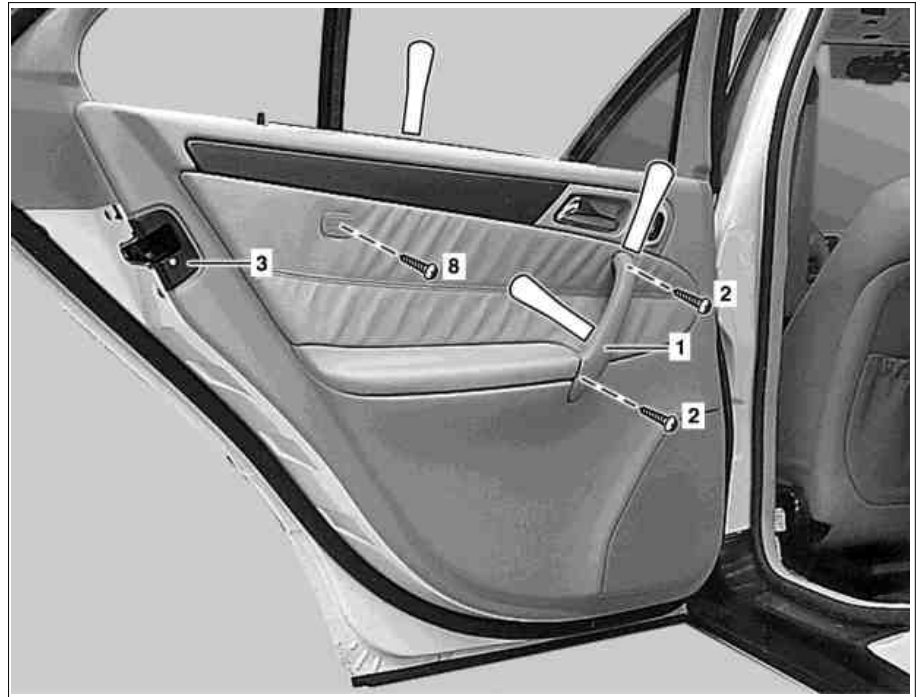


P72.12-2088-06

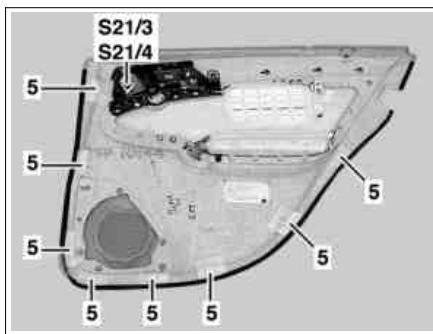

P72.12-2089-01

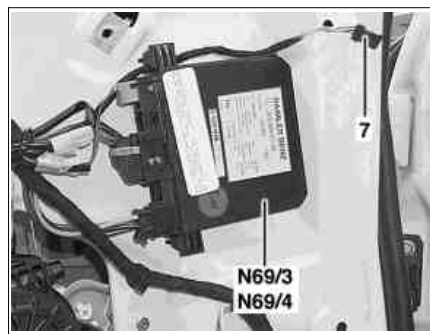

P54.21-2073-01

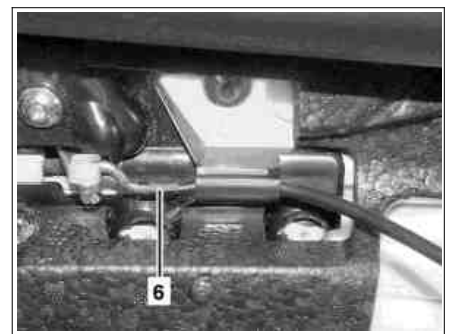










P72.10-2179-01

- 5 Clips
- 6 Control cable
- 7 Connector

- S21/3 Left rear power window switch
- S21/4 Right rear power window switch


- N69/3 Left rear door control module
- N69/4 Right rear door control module

 	Removing, installing		
1	Position assembly wedge at top of door handle (1) and press off	<b>i</b> Press not more than 10 mm out of the catch.  Assembly wedge	<a href="#">*110589035900</a>
2	Position assembly wedge at bottom of door handle (1) and press off	 Assembly wedge	<a href="#">*110589035900</a>
3	Take out door handle (1)		
4	Unscrew screws (2)		
5	Unclip SRS panel and unscrew screw (8)	With code (293) side airbag in left and right rear	
6	Remove lock trim surround (3)	 Torx bit set	<a href="#">*000589011000</a>
7	Press door liner (4) off of inner door panel at bottom at front and rear in area of clips (5) with assembly wedge	 Inspect clips for damage.  Assembly wedge	<a href="#">*110589035900</a>
8	Use assembly wedge to lift top of door liner (4) out of the sealing rail	 Assembly wedge	<a href="#">*110589035900</a>
9	Unhook control cable (6) from inner door actuation		
10	Detach connector (7)	<b>i</b> On left rear power window switch (S21/3), right rear power window switch (S21/4).	
11	Place door liner (4) down		
12	Install in the reverse order		

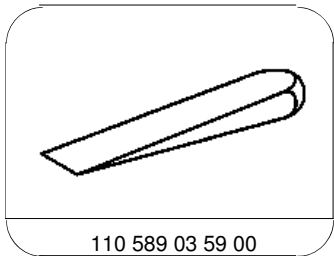

110 589 03 59 00

Assembly wedge

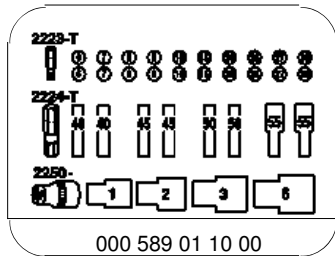

000 589 01 10 00

Torx bit set