

AR72.10-P-1950-03Q	Adjustment of the preload on the front window		
--------------------	---	--	--


Modification notes

19.6.06	Screw for window lift on crank window	Model 209	*BA72.10-P-1013-01A
---------	---------------------------------------	-----------	---------------------

Nm Front door


Number	Designation		Model 209
BA72.10-P-1013-01A	Screw for window lift on crank window	Nm	12

- 1 Remove grommets.
- 2 Loosen nuts (1, 2) for front and rear power window rails at door bottom.
- 3 When front door is open, adjust preload in relation to roof frame by displacing the rear power window rail and tighten nut (1) (observe torque).
- 4 Tighten nut (2) of front guide rail (observe torque).

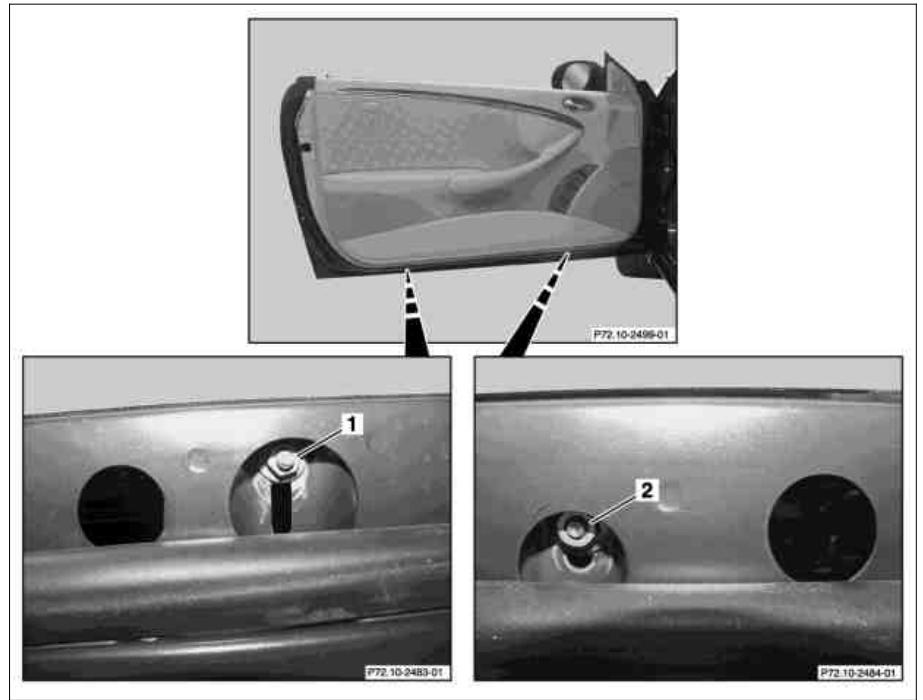

P72.10-2481-06

- i** Move the rear power window rail so that, when the window runs up the inner edge of window, it runs flush into the reference edge (arrow) of the roof seal.
- 5 Carry out visual inspection of the glass run in the roof frame seal and repeat the process if necessary.
- 6 Fit grommets.

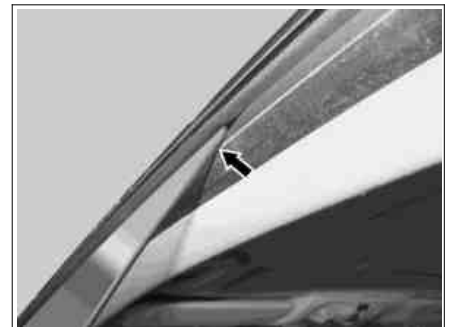

P72.10-2485-01