


- 1 Wind self-adhesive felt tape (21) around iPod interface (3) on the side with the connection jack for iPod wiring harness (see arrow) as shown in figure.
- 2 Attach velcro strip (22) to iPod interface (3) as shown in figure.

i Adhesion surfaces must be clean, dry and free of grease.

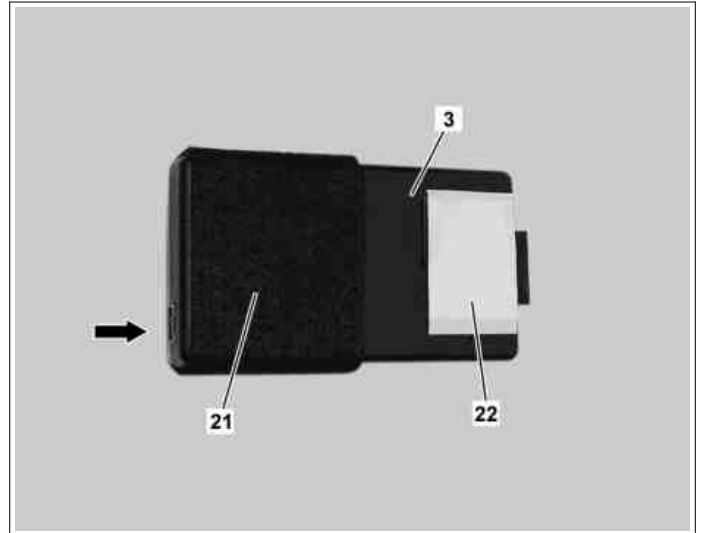

P82.60-5281-11


- 3 Connect connector (5) of iPod wiring harness (1) and connector (7) of interface wiring harness (8) to the iPod interface (3).

i The connections are mechanically coded to prevent connecting incorrectly.

- 4 Position iPod interface (3) between AC housing and A-pillar and secure to the A-pillar using velcro strip (22) as shown in figure.

i Adhesion surfaces must be clean, dry and free of grease. If required, fasten iPod interface (3) additionally using self-adhesive felt tape.

Shown on model 209.3

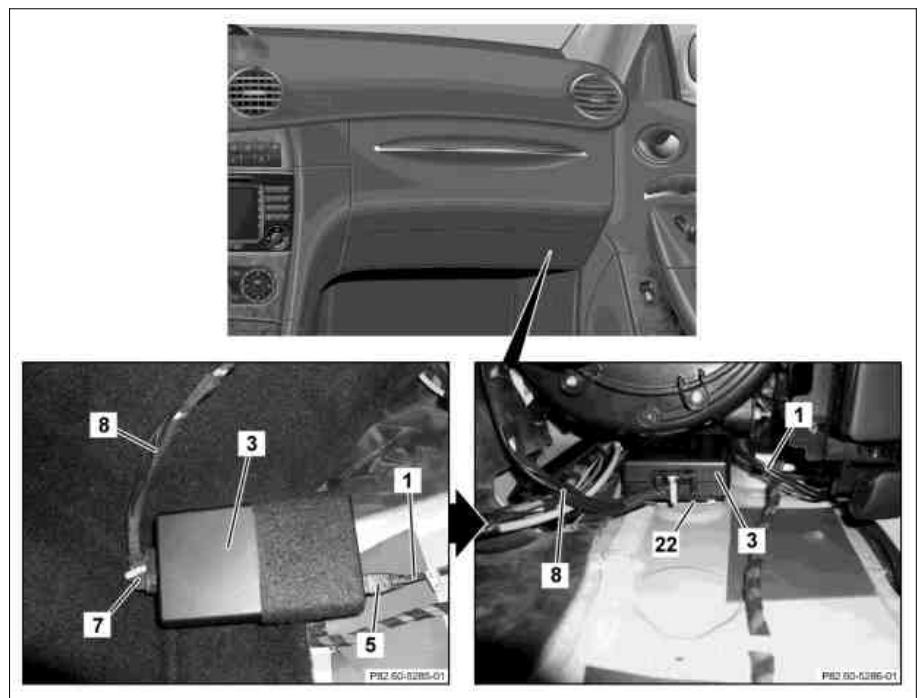

P82.60-5284-06