



110 589 03 59 00

Mounting wedge

- 1 Open glove compartment lid (18) and remove cover (19) on side of the glove compartment using mounting wedge .


Shown on model 209.3

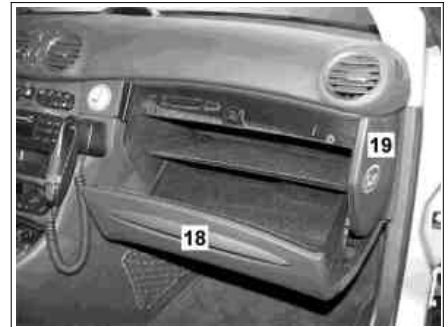


P82.60-5290-01

- 2.1 Only for vehicles **with** code 527 COMAND APS (with navigation)

- Remove AUX jack (20) out of the glove compartment (9) and disconnect from the COMAND operating, display and control unit (A40/3).

 The AUX jack wiring harness with the AUX jack (20) is no longer required.


Shown on model 209.3 with glove compartment lid removed

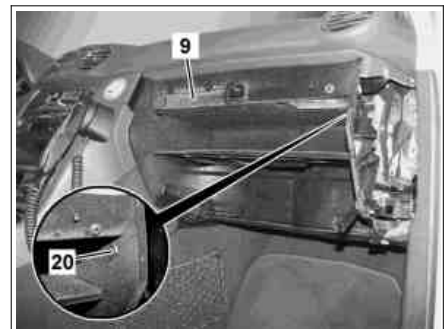


P82.60-5237-01

- 2.2 Only for vehicles **without** code 527 COMAND APS (with navigation)



- Break out the side opening (see arrow) out of the glove compartment (9) using a small flat tip screwdriver.

 The opening is perforated.

Illustrated on removed glove compartment

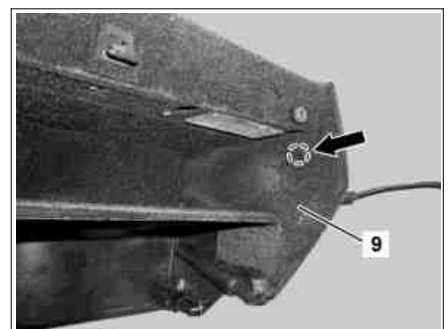

P82.60-5238-01

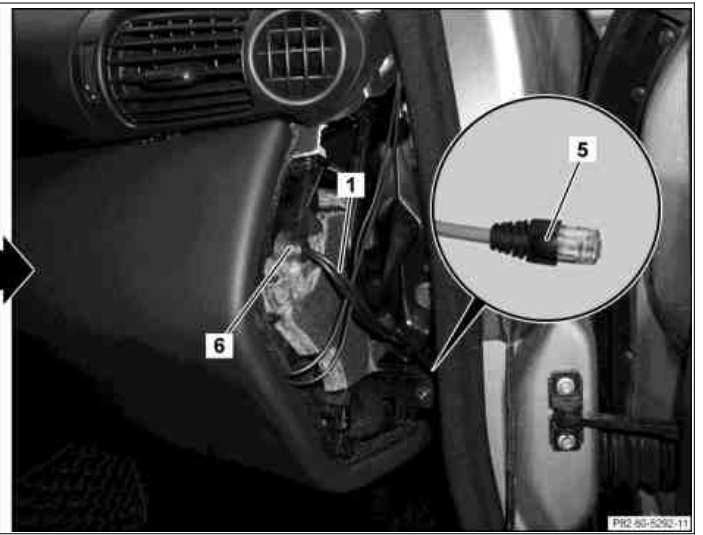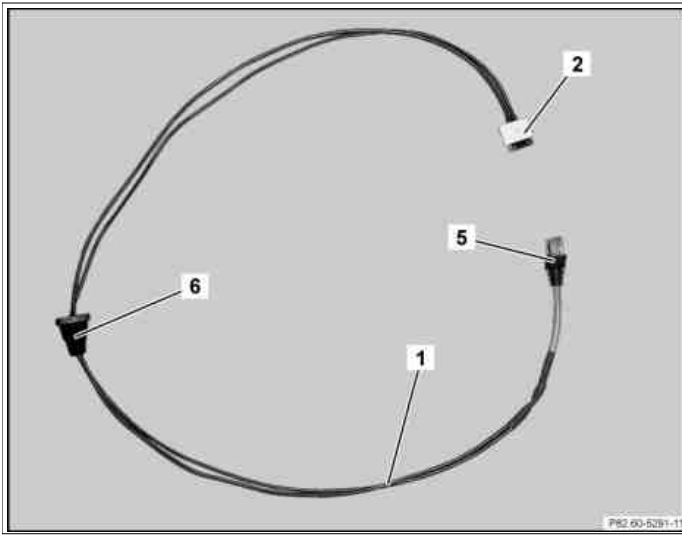

P82.60-5293-08

- 3 Guide interface connector (5) of the iPod wiring harness (1) from the inside out through the opening in the glove compartment and route in the front passenger footwell as shown in the figure (see magnification).
- i** Interface connector (5) is connected to the iPod interface at a later time.
- 4 Install grommet (6) in opening in glove compartment, and route and secure iPod wiring harness (1) as shown in figure.

i If the diameter of the opening in the glove compartment is not large enough for fitting the grommet (6), enlarge the opening until the grommet (6) can be fitted tightly.

- 5 Install cover on side of glove compartment.
- ⓘ** Ensure that the iPod wiring harness is not pinched.

Shown on model 203