



1 Loosen water pocket from frame of rear panel window.

**i** To do this, remove rivet (10).

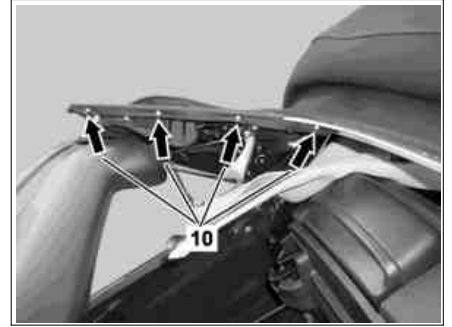

P77.31-2234-01


2 Remove bolt (11) from retaining rail.

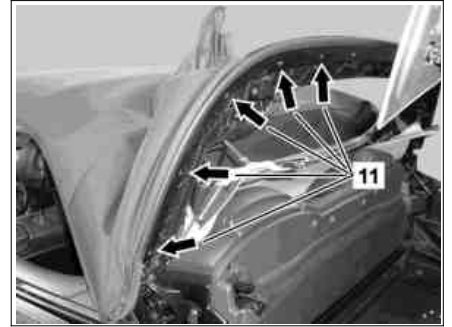

P77.31-2235-01

3 Fold plastic rail of soft top canvas (12) forward.

4 Remove bolt (13).

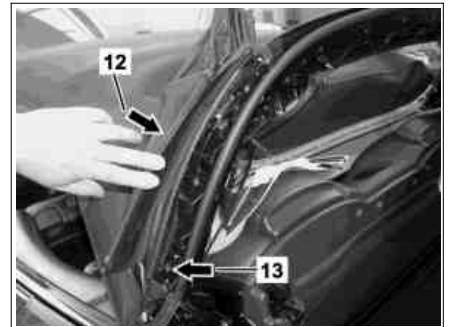

P77.31-2236-01

5 Remove rivet (14).

**i** **Installation:** Guide the shackle of the soft top canvas together with the narrow shackle around the soft top bow and rivet to the water pocket together with the wide shackle.

Observe sequence:

Soft top canvas (4) -->narrow shackle of water pocket (5) -->wide shackle of water pocket (6).



P77.31-2231-01




P77.31-2230-01

- 6 Unclip guide (39) with tension cable (38) from soft top bow.

**i** **Installation:** Guide the tension cable (38) through the water pocket, thread together guide (39) and lock in position in the soft top bow.

- 7 Assemble in the reverse order.

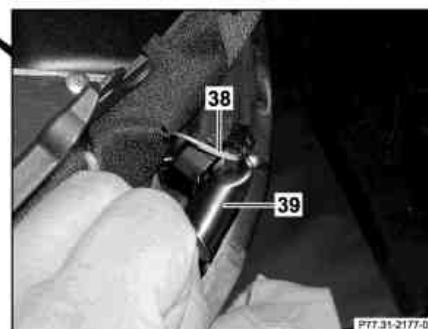

P77.31-2175-06