


MODEL 230.4

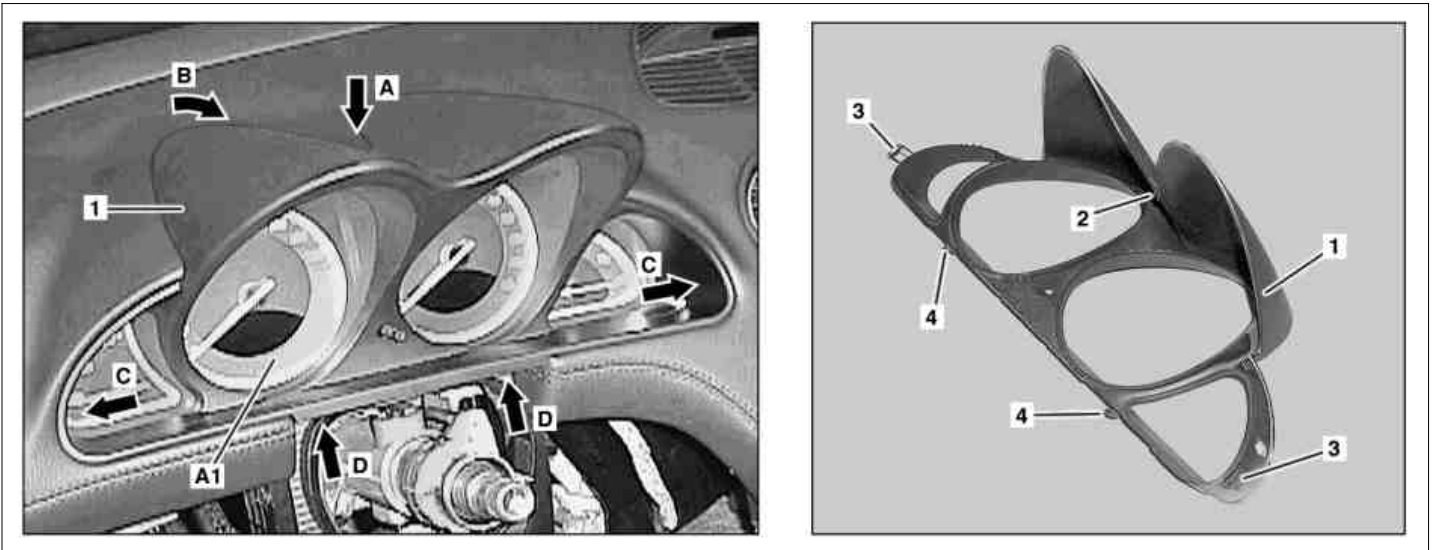


P68.10-2791-08

Vehicles up to 28.1.08 without code (809)
Model year 2009, shown on removed
steering column tube

- 1 Instrument cluster paneling
- 2 Catch hook
- 3 Retaining tab

- 4 Catch hook
- A1 Instrument cluster

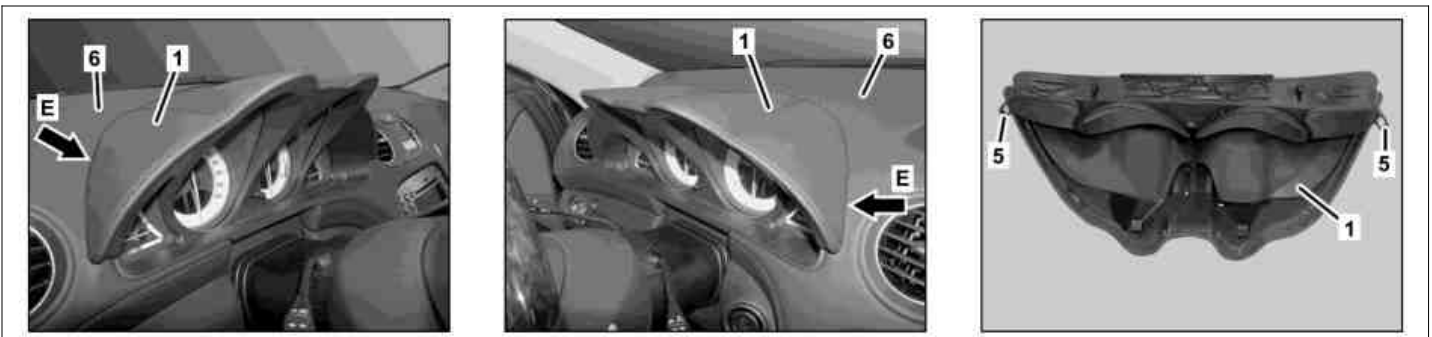

P68.10-3893-07

Vehicles as of 29.1.08 or with code (809)
Model year 2009

- 1 Instrument cluster paneling
- 5 Retaining tab

- 6 Instrument panel

☒ ☒	Remove/install		
1	Completely move steering wheel down and toward rear.		
2	Press stay on dashboard down with thumb (arrow A) and lightly tilt instrument cluster cover (1) in direction of arrow (arrow B)	Vehicles up to 28.1.08 without code (809) Model year 2009 i This unlocks the catch hook (2).	
3	Pull instrument cluster paneling (1) toward rear at side (arrows C) and simultaneously press instrument cluster (A1) toward front until instrument cluster paneling (1) disengages perceptively	Vehicles up to 28.1.08 without code (809) Model year 2009 i This unlocks the retaining tabs (3).	
4.1	Press instrument cluster paneling (1) upward in area of steering column tube louver cutout (arrows D), pull toward rear and remove	Vehicles up to 28.1.08 without code (809) Model year 2009 i This unlocks the catch hooks (4).	
4.2	Manually unclip instrument cluster panel (1) on left and right retaining tab (5) from instrument panel (6) (arrows E) and remove.	Vehicles as of 29.1.08 or with code (809) Model year 2009	
5	Install in the reverse order		