


MODEL 203.7## #E with CODE (809) Model year 2009

MODEL 171.4 as of 3.3.08

MODEL 171.4 with CODE (809) Model year 2009

MODEL 230.4 as of 29.1.08

MODEL 230.4 with CODE (809) Model year 2009

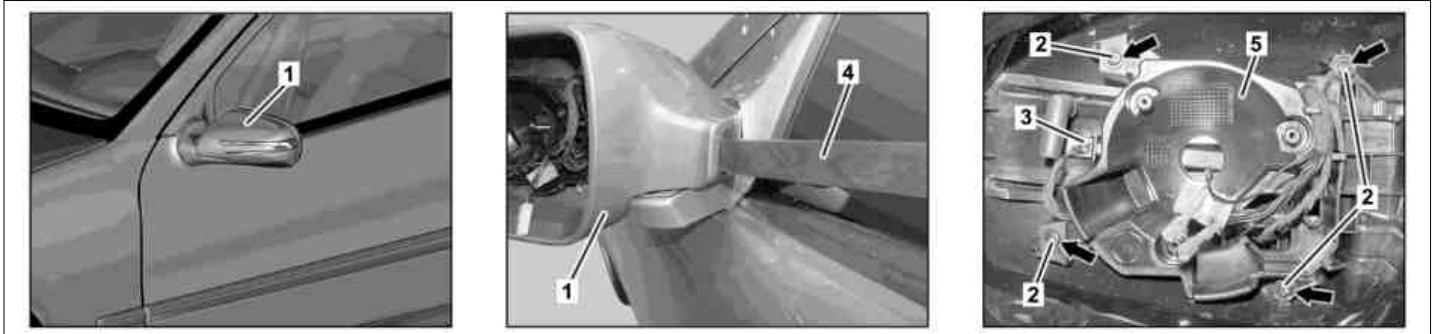

P88.70-2510-07

Shown on model 203.7







1 Outside mirror trim


2 Bolts

3 Electrical connector

4  Mounting wedge

5 Basic rear mirror

 	Remove/install		
1	Remove glass adjustment drive	Model 203.7 Model 171.4 Model 230.4	AR88.70-P-9060P AR88.70-P-9060V AR88.70-P-9060R
2	Remove bolts (2)		
3	Disconnect electrical connector (3)	 Observe installation position of associated electrical line.	
4	Unclip outside mirror paneling (1) from rump mirror (5) with assembly wedge (4) and remove	 When unclipping and removing outside mirror paneling (1) ensure that the threaded mounts (arrows) do not break off.  Installation: When inserting outside mirror paneling (1) ensure that the threaded mounts (arrows) do not break off. 	*110589035900
5	Install in the reverse order		

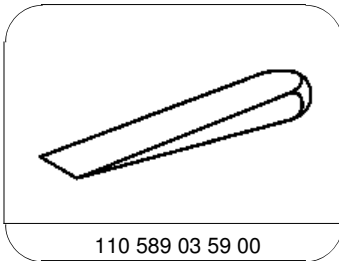

110 589 03 59 00

Mounting wedge