



MODEL 230.4

- 1 Glove compartment
- 2 Trim
- 3 Screw
- 4 Bolts
- 5 Cover

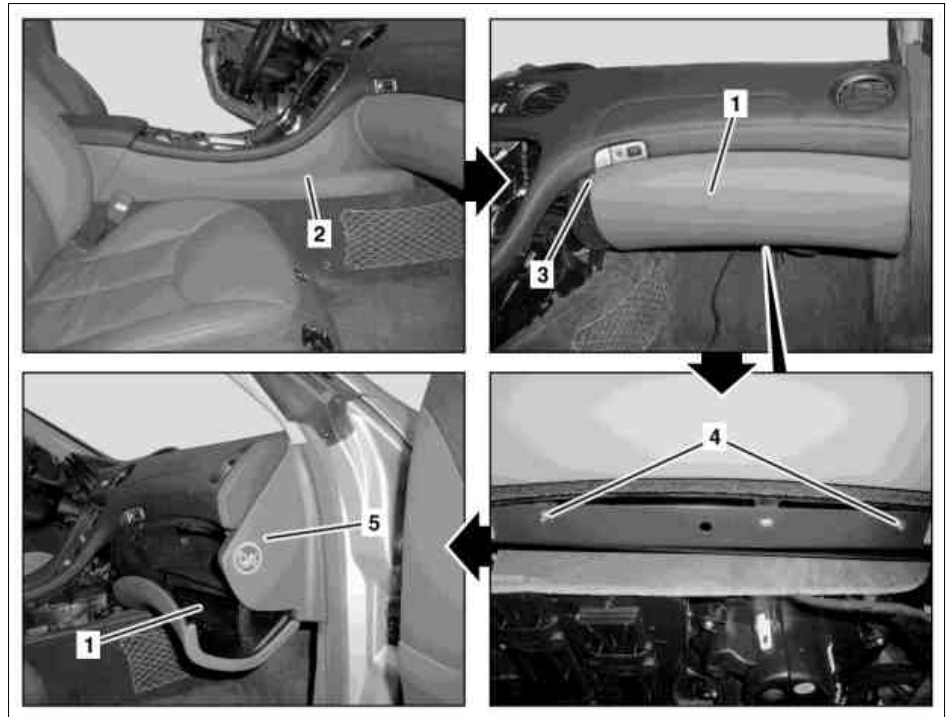

P68.10-2574-06

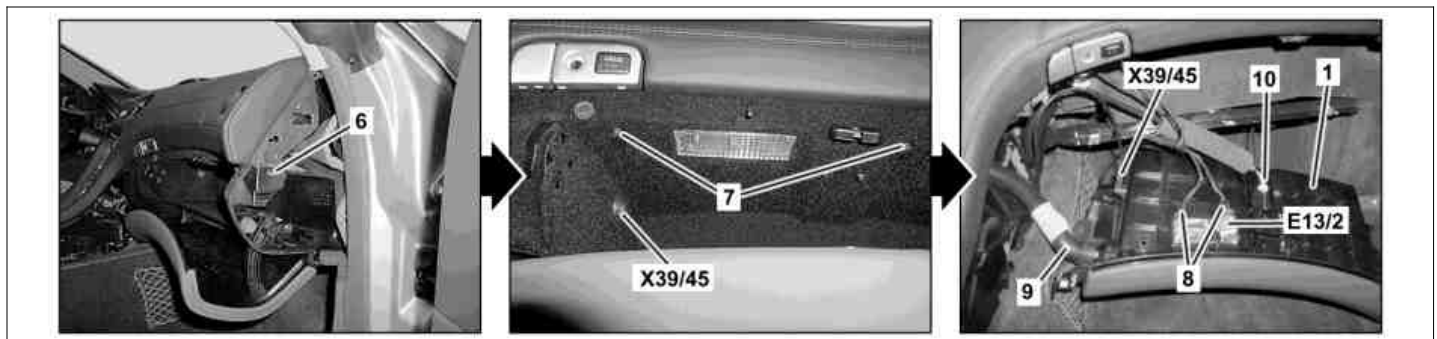


P68.10-3892-07

- 1 Glove compartment
- 6 Screw
- 7 Bolts
- 8 Electrical connectors
- 9 Vent hose
- 10 Bowden cable
- E13/2 Glove compartment illumination with switch
- X39/45 Walkman separation point (without code (518) Media interface)

Remove/install		
1	Unclip paneling (2) from retaining clips with mounting wedge and remove	*110589035900
2	Unscrew bolt (3)	
3	Remove cover below dashboard on right	AR68.10-P-1520R
4	Remove bolts (4)	
5	Open glove compartment lid and unclip cover (5) from dashboard with mounting wedge.	*110589035900
6	Unscrew bolts (6, 7)	
7	Pull glove box (1) out of dashboard until electrical connectors (8) are accessible.	
8	Disconnect electrical connectors (8) from glove compartment illumination with switch (E13/2)	
9	Detach vent hose (9)	

10	Unhinge Bowden cable (10)	i Installation: Ensure that Bowden cable (10) can move freely.	
11	Remove Walkman separation point (X39/45) from glove box (1)	On vehicles without code (518) Media interface	AR68.10-P-1400-01CW
12	Install in the reverse order		

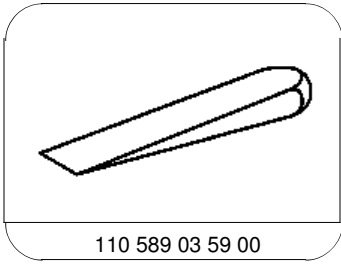

110 589 03 59 00

Mounting wedge