


## MODEL 230.4

- 1 *Seat-back lining*
- 2 *Trim*
- 3 *Fabric cover*
- 4 *Bolts*

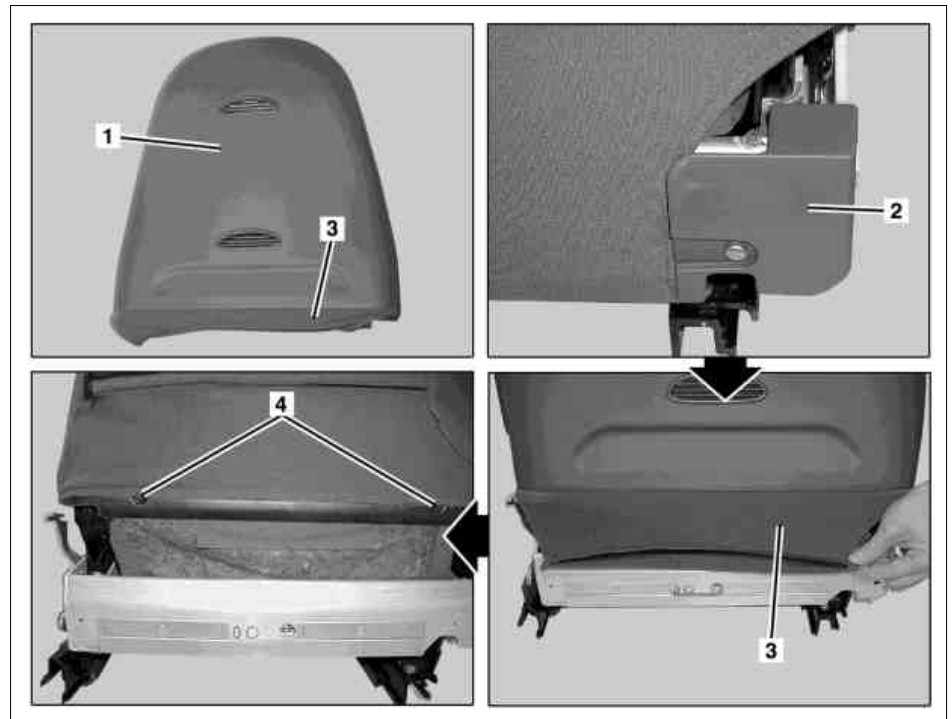

P91.10-2330-06

☒ ☒	Remove/install		
1	Remove trim from front seat frame of left or right front seat		AR91.10-P-1200R
2	Detach trim (2) from seat frame at bottom		
3	Unhook terminal strip from fabric cover (3) downwards		
4	Fold fabric cover (3) upwards and remove screws (4)		
5	Slide seat-back lining (1) downwards out of guides at backrest frame and remove		
6	Install in the reverse order		