


MODEL 230.4 except CODE (P99) "AMG Black Series" special model

- 1 Rear center section paneling
 2 Floor Covering
 3 Expansion clip
 4 Screw clips

- E18/1 Trunk lamp
 X58/1 Interior socket

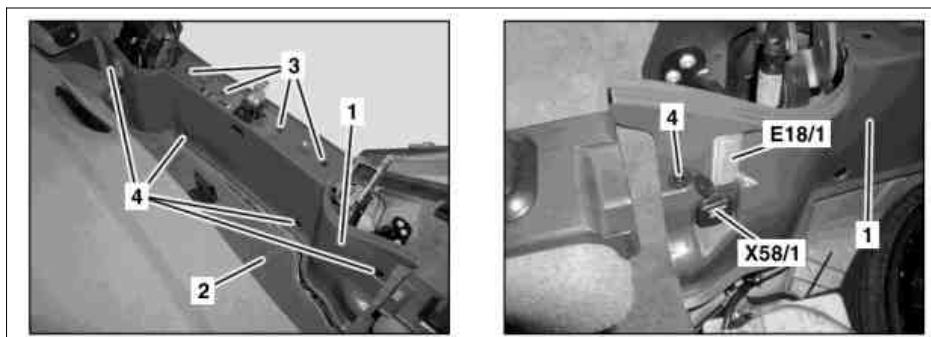

P68.30-3259-04

☒ ☒	Remove/install		
1	Open trunk lid		
2	Take floor covering (2) out of luggage compartment		
3	Remove expansion clips (3)	i Installation: Replace damaged expansion clips (3).	
4	Remove screw clips (4).	i Installation: Replace damaged screw clips (4).	
5	Loosen rear center section paneling (1) from rear center section until electrical connectors on luggage compartment lamp (E18/1) and interior socket (X58/1) are accessible.	i Lift rear center section paneling (1) over locking eye cover.	
6	Disconnect electrical connectors from luggage compartment lamp (E18/1) and interior socket (X58/1)	! Insulate socket with insulation tape to prevent short circuit	
7	Remove paneling from rear center section (1)		
8	Install in the reverse order		