


MODEL 230.4 except CODE (P99) "AMG Black Series" special model

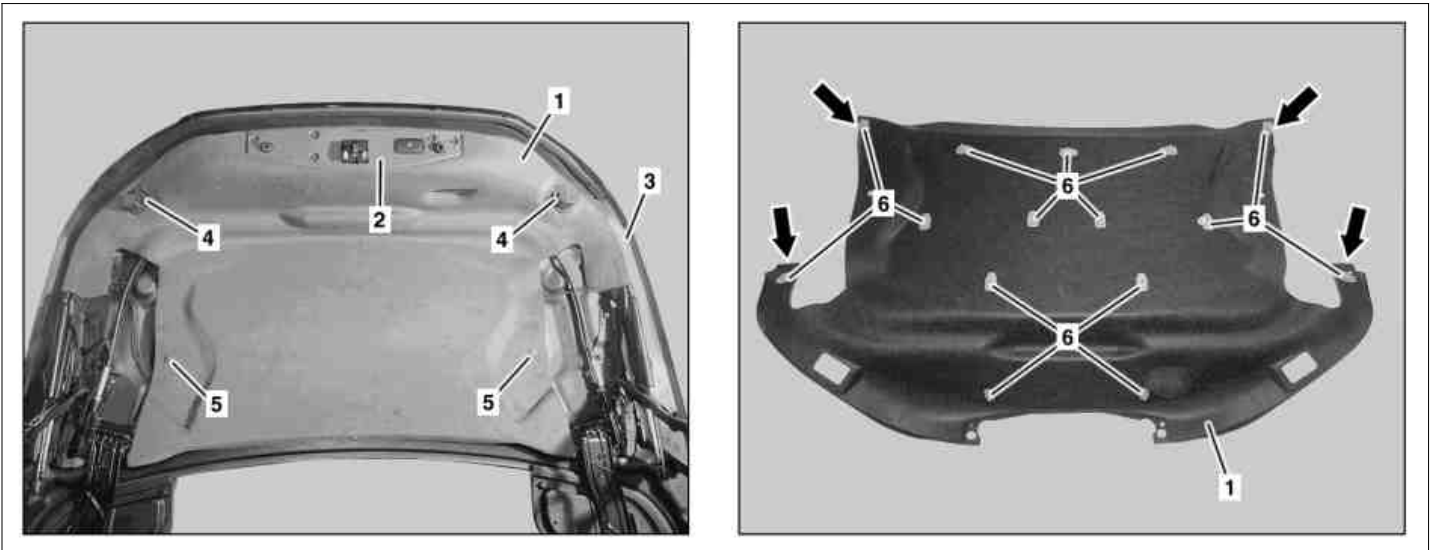

P68.30-3262-08


- 1 Trim
- 2 Cover
- 3 Trunk lid

- 4 Locking wedge
- 5 Expansion clip
- 6 Clip

	Remove/install		
Danger!	Risk of injury caused by moving parts that can pinch, crush or, in extreme cases, even sever extremities	No parts of the body or limbs should be within the operating range of the mechanism when moving components.	AS00.00-Z-0009-01A
1	Completely open Vario roof		
2	Remove cover (2) from trunk lid (3)	Installation: Replace damaged expansion clips.	
3	Remove closing wedges (4) from trunk lid (3)		*BA88.50-P-1015-01A
4	Remove expansion clips (5)	Installation: Replace damaged expansion clips (5).	
5	Unclip paneling (1) from trunk lid (3) starting at outer clips (6) (arrows) and remove.	Position mounting wedge directly to corresponding clip (6) to unclip, to prevent damaging paneling (1). Installation: Replace damaged clips (6). 	*110589035900
6	Install in the reverse order		
7	Check trunk lid adjustment (3), correct if necessary	Vehicles up to end no.. 063909 Vehicles as of end no. 063910	AR88.50-P-5200R AR88.50-P-5200RA

Trunk lid

Number	Designation	Model 230
BA88.50-P-1015-01A	Bolt, striker to trunk lid	Nm 8

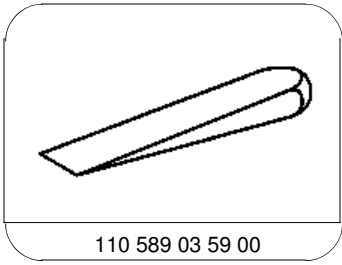

110 589 03 59 00

Mounting wedge