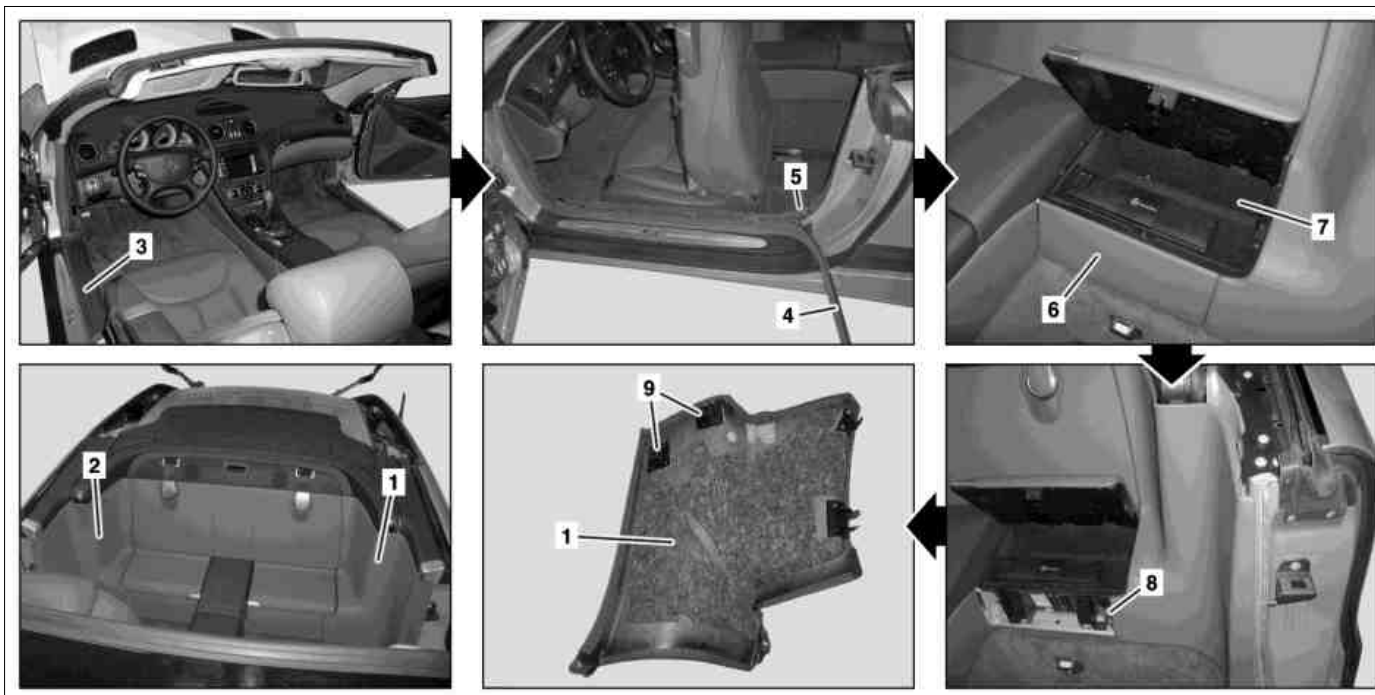






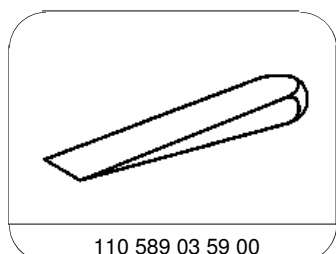
MODEL 230.4 except CODE (P99) "AMG Black Series" special model



P68.30-2373-09

- | | | | | | |
|---|-------------------------------|---|-------------------------|---|-------------|
| 1 | Left rear side wall paneling | 4 | Edge guard | 7 | Stowage box |
| 2 | Right rear side wall paneling | 5 | Mounting clamp | 8 | Screw |
| 3 | Cover | 6 | Paneling on stowage box | 9 | Clip |

 	Remove/install		
1	Completely open Vario roof		
2	Remove draft stop		
3	Move driver and front passenger seat toward front to end position		
4	Unclip cover (3) from door sill molding with mounting wedge and remove		*110589035900
5	Remove edge guard (4) in area of B-pillar		
6	Pull mounting clamp (5) off B-pillar		
7	Open stowage box (7)		
8	Unclip paneling from stowage box (6) and remove		
9	Unscrew bolt (8)		
10	Unclip left rear side wall paneling (1) and right rear side wall paneling (2) from clips (9) with mounting wedge and remove.		*110589035900
11	Install in the reverse order		



110 589 03 59 00

Mounting wedge